



WIRING DIAGRAM LDS-A4-CP

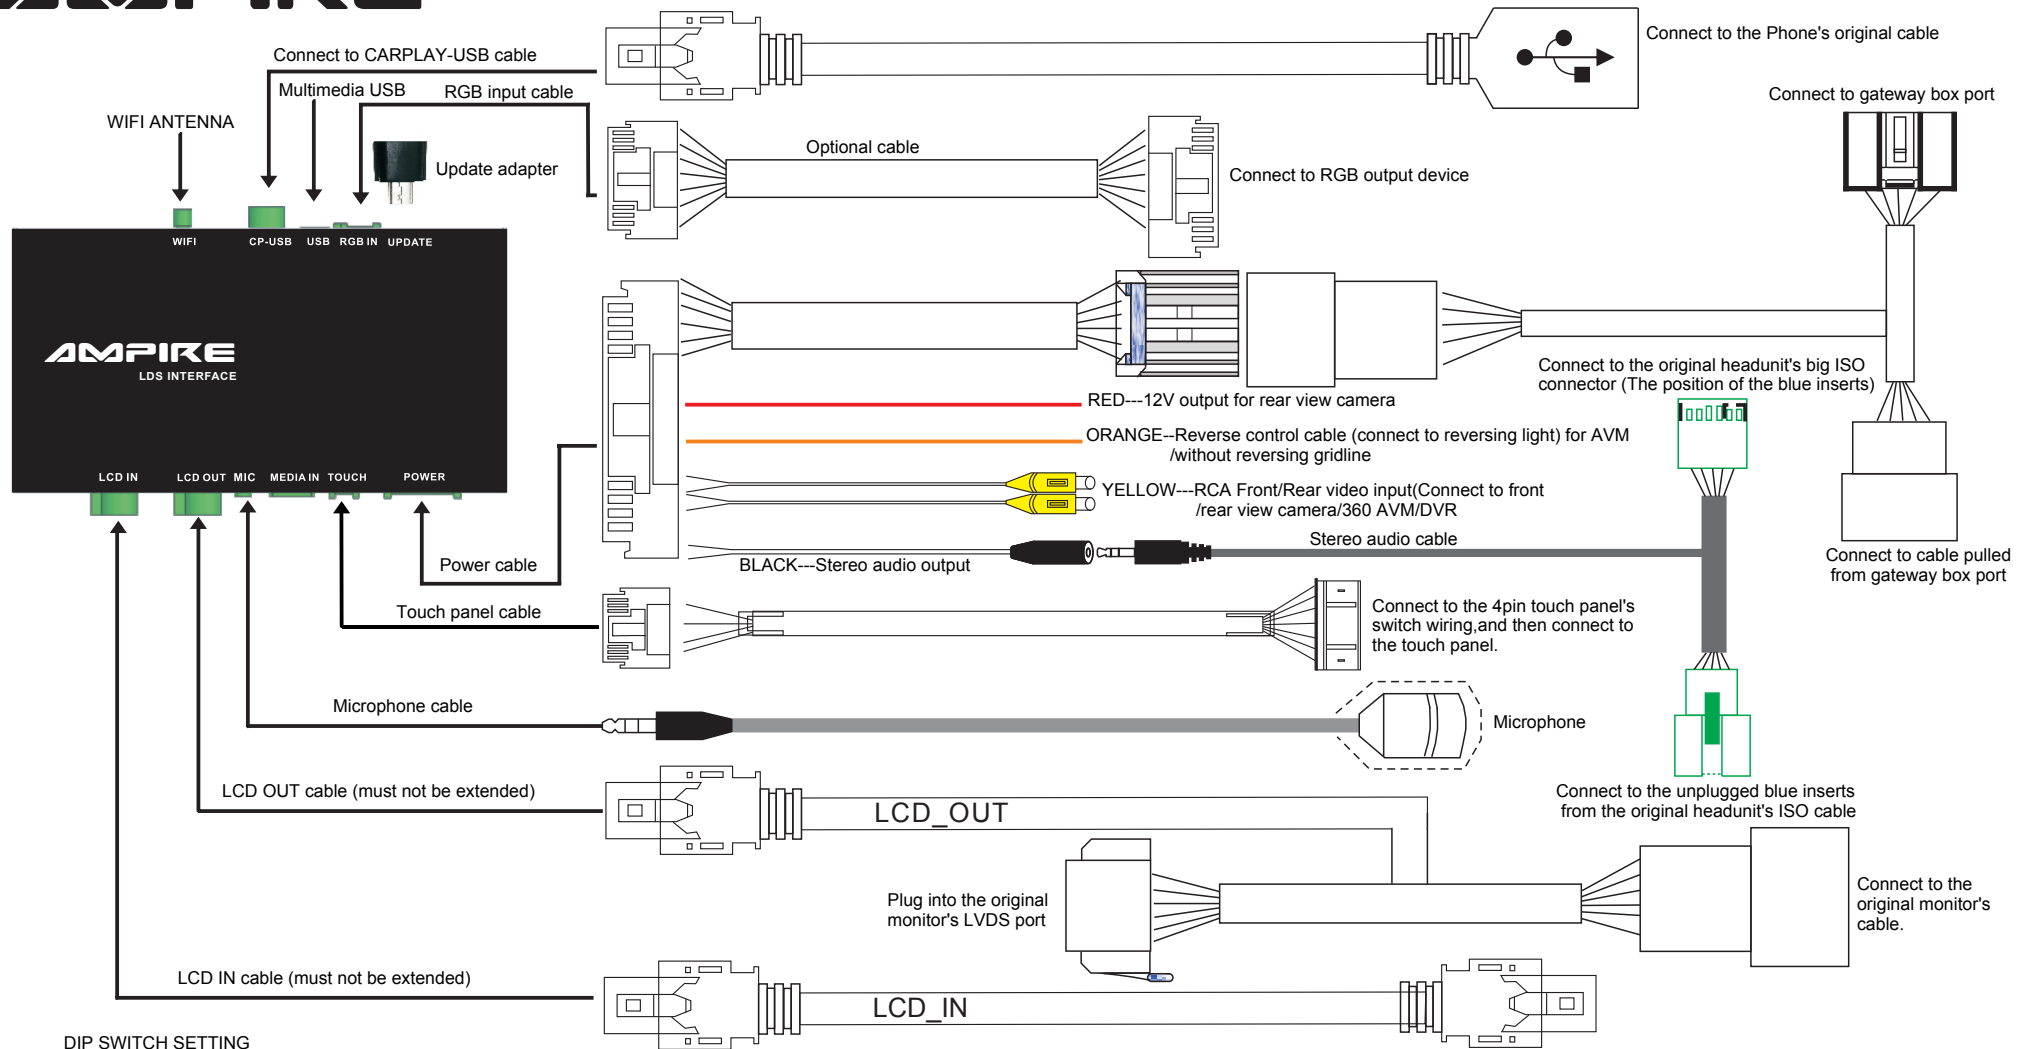

DIP SWITCH SETTING
(After changing the dip code, press "reset" or power-on again)

DIP	S/W	Status	Function
PIN 1	OFF/ON		Without touch panel/with touch panel
PIN 2	OFF/ON		NG/Touch point coordinate correction PIN1 and PIN2 "ON", after configuration PIN2 "OFF"
PIN 3	OFF/ON		enable/disable front view camera
PIN 4	OFF/ON		Reversing gridline/Enable 360 panoramic
PIN 5	OFF/ON		NG / NG
PIN 6	OFF/ON		Rear view camera CVBS input / RGB input
PIN 7	OFF/ON		NG / NG
PIN 8	OFF/ON		Aftermarket rear view CAM/Original rear view CAM

REMARK: Please stay in the AUX Interface when opening the CARPLAY Interface

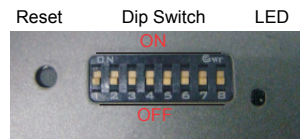

- 1) Long press and hold the "MODE" Button to enter the Interface, long press the "MODE" Button again to exit.
- 2) Short press Voice Button to open "Siri".
- 3) Steering wheel controls & Roller to control up/down/right/left/ok.