


Quick Start Guide


1 Insert the batteries into the Remote Control

Remove the back cover to reveal the battery compartment. Insert two size **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Place the cover back on.

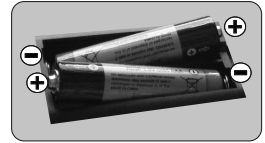


2 Connect the antenna to your TV

REAR SIDE OF THE TV

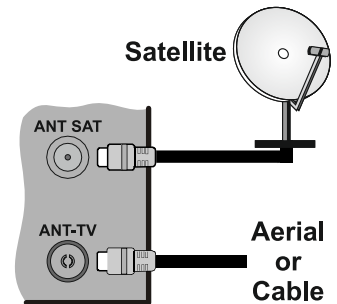

3 Connect the TV to the mains socket




4 To switch the TV on

Connect the power cord to the mains socket. Then the standby LED lights up.


To switch on the TV from standby mode either;

1. Press the **Standby** button, a numeric button or **Programme +/-** button on the remote control
2. Press the middle of the side function switch on the TV in

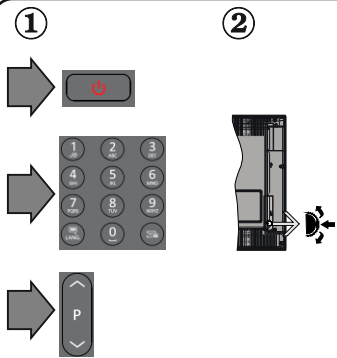

5 HDMI input

PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING. Use a HDMI to HDMI cable to connect the two units together. To select the HDMI input, press the **Source** button on the remote control. Each time it is pressed the on-screen menu confirms your selection.

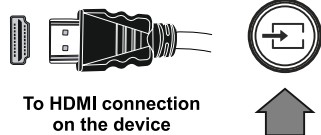

To HDMI connection
on the device

6 Auto Setup procedure

When the TV is operated for the first time, installation wizard will guide you through the process. First, language selection screen will be displayed. Select the desired language and press **OK**.

On the second screen set your country preference. Press **OK** to continue.

You can activate **Store Mode** option in the next step. This option is intended only for store use. It is recommended to select **Home Mode** for home use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. Read the related explanations displayed on the screen for each highlighted feature before making any changes. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed. Highlight **Next** and press **OK** button on the remote control to continue.

The **Network/Internet Settings** menu will be displayed. Please refer to the next section about internet connection on the next page to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

On the next screen you can set broadcast types to be searched. Additionally you can set a broadcast type as your favourite one. Priority will be given to the selected broadcast type during the search process and the channels of it will be listed on the top of the channel list. When finished, highlight **Next** and press **OK** to continue.

About Selecting Broadcast Type

Digital Aerial: If this broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

Digital Cable: If this broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. A message will be displayed before starting to search asking if you want to perform cable network search. If you select **Yes** and press **OK** you can select **Network** or set values such as **Frequency**, **Network ID** and **Search Step** on the next screen. If you select **No** and press **OK** you can set **Start Frequency**, **Stop Frequency** and **Search Step** on the next screen. When finished, highlight **Next** and press **OK** button to continue.

Note: Searching duration will change depending on the selected Search Step.

Satellite: If **Satellite** broadcast search option is turned on, the TV will search for digital satellite broadcasts after other initial settings are completed. Before satellite search is performed some settings should be made. **Antenna Type** menu will be displayed first. You can select **Antenna Type** as **Direct**, **Single Satellite Cable** or **DiSEqC switch** by using directional buttons.

Analogue: If this broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

Note: Do not turn off the TV while initializing first time installation.

7 Connect your TV to the Internet

Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV.


However, if your TV does not have Wireless USB dongle or doesn't support internal WLAN feature, you should use wired connection type. Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.

To use your TV with your wireless network, you may need a WLAN USB dongle. You should connect it to one of the USB inputs on the TV. If your TV supports internal WLAN feature you won't need a wireless LAN adaptor.

Press the **Menu** button to open the main TV menu. Select **Settings** by using the directional buttons, highlight **Network** and press **OK**. While **Network Type** is highlighted, press Left or Right buttons to select connection type. Wired connection will be established automatically. If wireless connection is selected, highlight **Scan Wireless Networks** and press **OK**. The TV will search for the available wireless networks and list them when finished. Select one and press the **OK** button to connect. If the wireless network is password-protected you should enter the correct password to access the network.

Note: Refer to the instruction manual for more details.

Wireless Connection

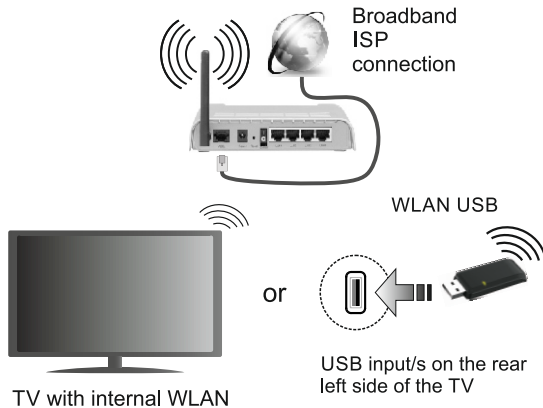

Hurtigstartguide


1 Sette inn batteriene i fjernkontrollen

Fjern bakdekselet for å åpne batterirommet. Sett inn to batterier med størrelsen **AAA**. Kontroller at tegnene (+) og (-) matcher (observer riktig polaritet). Sett dekselet tilbake på plass.




2 Koble antennen TV-en

BAKSIDEN AV TV-EN

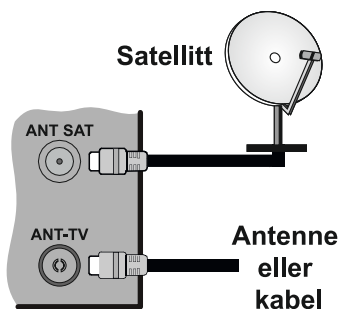

3 Sett støpselet til TV-en i en stikkontakt




4 Skru på TV-en

Koble strømledningen til apparatet. Da tennes LED-lampen på fronten av apparatet.


For å slå på TV, enten;

1. Trykk på **Standby**-knappen, en tallknapp eller **Program +/-** knappen på fjernkontrollen.
2. Trykk midt på funksjonsbryteren på siden på TV-en

①



②



5 HDMI-inngang

VENNLIGST PÅSE AT BEGGE ENHETER ER SKRUDD AV FØR TILKOBLING. Bruk en HDMI til HDMI-kabel for å koble de to enhetene sammen. Trykk Source-knappen på fjernkontrollen, velg HDMI-inngang med piltast opp/ned. Bekreft med OK.



Til HDMI tilkoblingen på enheten



6 Automatisk konfigurasjonsprosedyre

Når TV-en brukes for første gang, vil installasjonsveilederen guide deg gjennom prosesen. Først vil skjermen for valg av språk vises. Velg ønsket språk og trykk OK. Angi ønsket land på den andre skjermen. Trykk **OK** for å fortsette.

Du kan på dette tidspunktet aktivere alternativet **Butikkmodus** i neste trinn. Dette alternativet er kun ment for butikkbruk. Det anbefales å bruke Hjemmemodus for hjemmebruk.

Avhengig av TV-modellen din og landsvalg, kan menyen Personvern vises på dette tidspunktet. Ved å bruke denne menyen kan du angi dine personvernrettigheter. Fremhev en funksjon og bruk venstre og høyre retningsknapp for å aktivere eller deaktivere. Les de relaterte forklaringene som vises på skjermen for hver uthevet funksjon før du foretar endringer. Hvis alternativet Internet-forbindelse er deaktivert, så vil skjermbildet Nettverks-/Internett-innstillinger bli hoppet over og ikke vist. Uthev Neste og trykk på **OK**-knappen for å fortsette.

Menyen **Nettverk-/Internett-innstillinger** vil bli vist. Henvis til neste avsnitt om Internett-tilkobling på neste side for å konfigurere en kablet eller trådløs tilkobling. Uthev Neste og trykk på **OK**-knappen for å fortsette.

På den neste skjermen kan du angi kringkastingstyper å søke etter. Du kan også velge en kringkastingstype som favoritt. Utvalgte sendetyper vil bli prioritert under søkeprosessen, og disse kanalene vil bli listet opp øverst på kanallisten. Når du er ferdig, uthev Neste trykk på OK for å fortsette.

Om valg av kringkastingstype

Digital Antenne: Hvis søkealternativet for Digital Antenne er valgt, vil TV-en søke etter digitale antennesendinger (bakkenett).

Digital Kabel: Hvis søkealternativet Kabel er valgt, vil TV-en søke etter digitale kabelsendinger etter at de andre første innstillingene er gjort. En melding vil bli vist før søket starter for å spørre om du vil utføre kabelnettverkssøk. Hvis du velger Ja og trykker på **OK** kan du velge Nettverk eller angi verdier som **Frekvens**, **Nettverks-ID** og **Søke-trinn** på neste skjerm-bilde. Hvis du velger Nei og trykker på OK kan du angi Startfrekvens, Stoppfrekvens og Søke-trinn på neste skjerm-bilde. Når du er ferdig, uthev **Neste** og trykk på **OK**-knappen for å fortsette. Merk: Søkevarigheten vil variere avhengig av valgt søke-trinn.

Satellitt: Hvis søkealternativet **Satellitt** er valgt, vil TV-en søke etter digitale satellittsendinger etter at de andre innstillingene er gjort. Du må gjøre noen innstillinger før du foretar et satellittsøk. Menyene **Antennetype** vil bli vist. Du kan velge Antennetype som Direkte, Enkel satellittkabel (Unicabel, CR,DCSS), eller DiSEqC-veksler ved å bruke retningsknappene.

Analog: Hvis dette alternativet er valgt, vil TV-en søke etter analoge sendinger etter at de andre første innstillingene er gjort.

Etter alle tilgjengelige stasjoner lagret, vil **Kanaler**-menyen bli vist. Du kan redigere kanallisten i henhold til preferansene dine ved å bruke **Rediger**-fanealternativene eller trykke på

Menu-knappen for å avslutte og se på TV.

Merk: Ikke slå av TV-en mens du begynner første gangs installasjon.

7 Koble TV-en til Internett

Tilkoblingsfunksjonen gjør at TV-en kan kobles til hjemmenettverket via kabel eller trådløst. Dette nettverkssystemet kan brukes til å koble til Internett eller få tilgang til foto-, video- og lydfiler som er lagret på en medieserver tilkoblet nettverket og spille/vis dem på TV-en. Hvis TV-en ikke har trådløs USB dongle eller ikke støtter intern WLAN-funksjonalitet, kan du bruke kablet tilkobling. Legg til TV-en i hjemmenettverket ved å koble det til modem/ruterern via en LAN-kabel (medfølger ikke).

For å bruke TV med trådløst nettverk, kan det være nødvendig med en trådløs WLAN USB-dongle. Du kobler den til én av USB-inngangene på TV-en. Hvis TV-en har intern WLAN-funksjonalitet trenger du ikke en USB-dongle.

Trykk **Menu**-knappen for å åpne TV-menyen. Velg **Innstillinger** ved å bruke retningsknappene, uthev **Nettverk** og trykk på **OK**. Når **Nettverkstype** er uthevet, trykker du venstre- eller høyre knappen for å velge tilkoblingstype. Kablet tilkobling opprettes automatisk. Hvis trådløs tilkobling er valgt, uthev **Søk etter trådløse nettverk** og trykk på **OK**. TV-en vil søke etter tilgjengelige trådløse nettverk og vise dem på skjermen. Velg nettverk og trykk **OK**-knappen for å fortsette. Hvis det trådløse nettverket er passordbeskyttet, må du legge inn riktig passord for å få tilgang til nettverket.

Merk: Se bruksanvisningen for mer informasjon.

Trådløs tilkobling

