Audi (A6/Q3/Old Q7) WIRING DIAGRAM

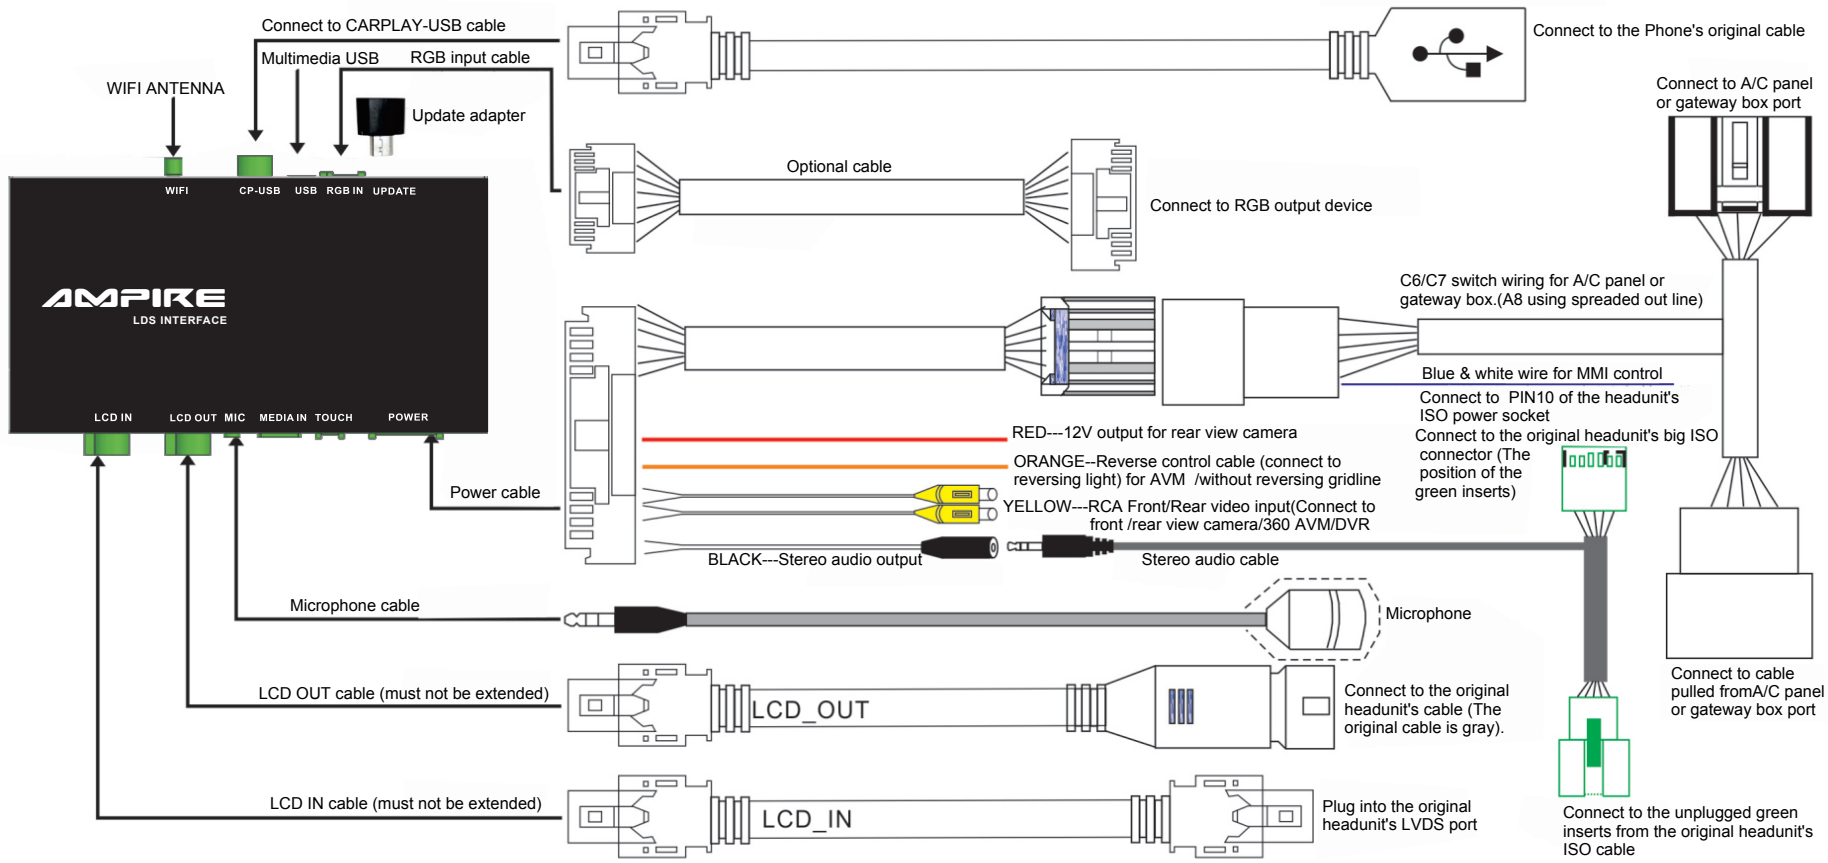

DIP SWITCH SETTING
(After changing the dip code,press "reset"or power-on again)

PIN 1	PIN 2	PIN 3	PIN 5	CAR MODEL
ON	OFF	OFF	OFF	2010~2012 A6L/A7(C6) CAN1 connect to gateway box 10-12 Q7 (7") CAN 1 connect to A/C beige socket's pin7&pin8
ON	OFF	ON	OFF	13-15 A6/A7/A8(C7) CAN1 connect to A/C red socket's pin4&5
OFF	OFF	ON	OFF	09~18 A4/A5/Q5 CAN1 connect to gateway box's red socket's pin5&pin15 .(Gateway bos is in the left side of the co-pilot)
ON	ON	OFF	OFF	High-end 7" A1/Q3 CAN1 connect to gateway box's (Under the steering wheel)pin5&15 or to A/C panel's beige socket's pin12&13
OFF	ON	OFF	OFF	Low-end 6.5" A1/Q3 CAN1 connect to gateway box's (Under the steering wheel)pin5&15 or to A/C panel's beige socket's pin12&13
OFF	OFF	OFF	OFF	USA version A4/A5/Q5 CAN1 connect to gateway box's red socket's pin5&pin15 .(Gateway bos is in the left side of the co-pilot)
OFF	OFF	OFF	ON	USA version Q7 (6.5") CAN1 connect to A/C beige socket's pin7&8
ON	OFF	OFF	ON	17~18 A4/Q7(7") CAN1 connect to ISO socket's (Gray socket)pin6&12, CAN2 connect to pin1&7; 09~11 Q7 MMI bule&white wire connect to pin3
ON	OFF	ON	ON	16~18 A6/A7/A8l CAN1 connect to ISO socket's (Gray socket)pin6&12, CAN2 connect to pin1&7; MMI system bule&white wire connect to pin3
OFF	OFF	ON	ON	A3(7") CAN1 connect to ISO socket's (Gray socket) pin6&12,CAN2 connect to pin1&7
OFF	ON	ON	ON	Q3/A3(5.8") CAN1 connect to ISO socket's (Gray socket)pin6&12,CAN2 connect to pin1&7

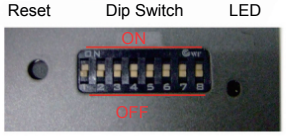

PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG/Touch point coordinate correction PIN7 "ON", after configuration PIN7 "OFF"
PIN 8	OFF/ON	Aftermarket rear view CAM/Original rear view CAM

REMARK: Please stay in the AUX Interface when opening the CARPLAY Interface

1) For A6/A7, long press and hold the "NAV" Button to enter the Interface, long press the "NAV" Button again to exit.
2) Short press "TEL" Button to open "Siri".
3) Knob to control up/down/right/left/ok.

1) For A1/Q3, long press and hold the Voice control Button to enter the Interface, long press the Voice control Button again to exit.
2) Short press the Voice control Button to open "Siri".
3) Steering wheel Roller to control up/down/ok.