


WIRING DIAGRAM LDS-Q7-CP

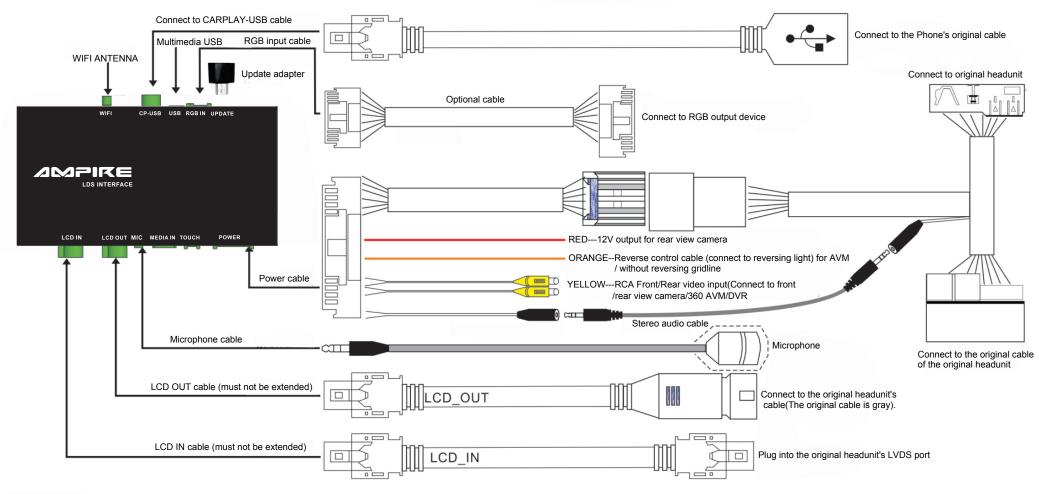

DIP SWITCH SETTING

(After changing the dip code, press "reset" or power-on again)

PIN	11	PIN 2	PIN 3	PIN 5	CAR MODEL
ON		OFF	OFF	OFF	2017 A4/Q7 8" CAN1(CAN+/CAN-)connect to original ISO socket (pin6/pin12)
ON	1	OFF	OFF		2017 A4/Q7 7" CAN1 connect to original ISO socket (pin6/pin12) CAN2 to pin1/pin7;Q7 MMI blue&white wire connet to ISO pin3
OF	F	OFF	ON	ON	A3(7") CAN1 connect to ISO socket's (Gray socket)pin6&12,CAN2 connect to pin1&7
OFI	F	ON	ON	ON	Q3/A3(5.8") CAN1 connect to ISO socket's (Gray socket)pin6&12,CAN2 connect to pin1&7

PIN 4	OFF/ON	Reversing gridline/Enable 360 panoramic
PIN 6	OFF/ON	Rear view camera CVBS input / RGB input
PIN 7	OFF/ON	NG/Touch point coordinate correction,and turn to "OFF"
PIN 8	OFF/ON	Aftermarket rear view camera/Original rear view camera



REMARK Please stay in the AUX Interface when opening the CARPLAY Interface



- For A3/A4L/Q7, long press and hold the "BACK" Button to enter the Interface, long press the "BACK" Button again to exit.
- 2) Short press "MENU" Button to open "Siri".
- 3) Knob to control up/down/right/left/ok.