



ZDAPB1



BMW 3-Series (E90/E91/E92/E93)

- 2005 - 2012
- E90/E91/E92/E93
- Basic Sound System

- Before installing check placement of the amplifier. If the amplifier is to be installed in the trunk a separate 5m cable is required.

- If it is to be installed under the passenger seat, check that there is room.



Stereo Removal 1

- Use a plastic pry tool on the outer edge of the plastic panel to pop it out.



Stereo Removal 2

- The panel is now loose. Either unplug the connectors on the back of the panel or put it to the side.




Stereo Removal 3

Tools required:


- PH2 Screwdriver

- Loosen the two screws marked with red circles. Then the stereo is loose and ready to be taken out.

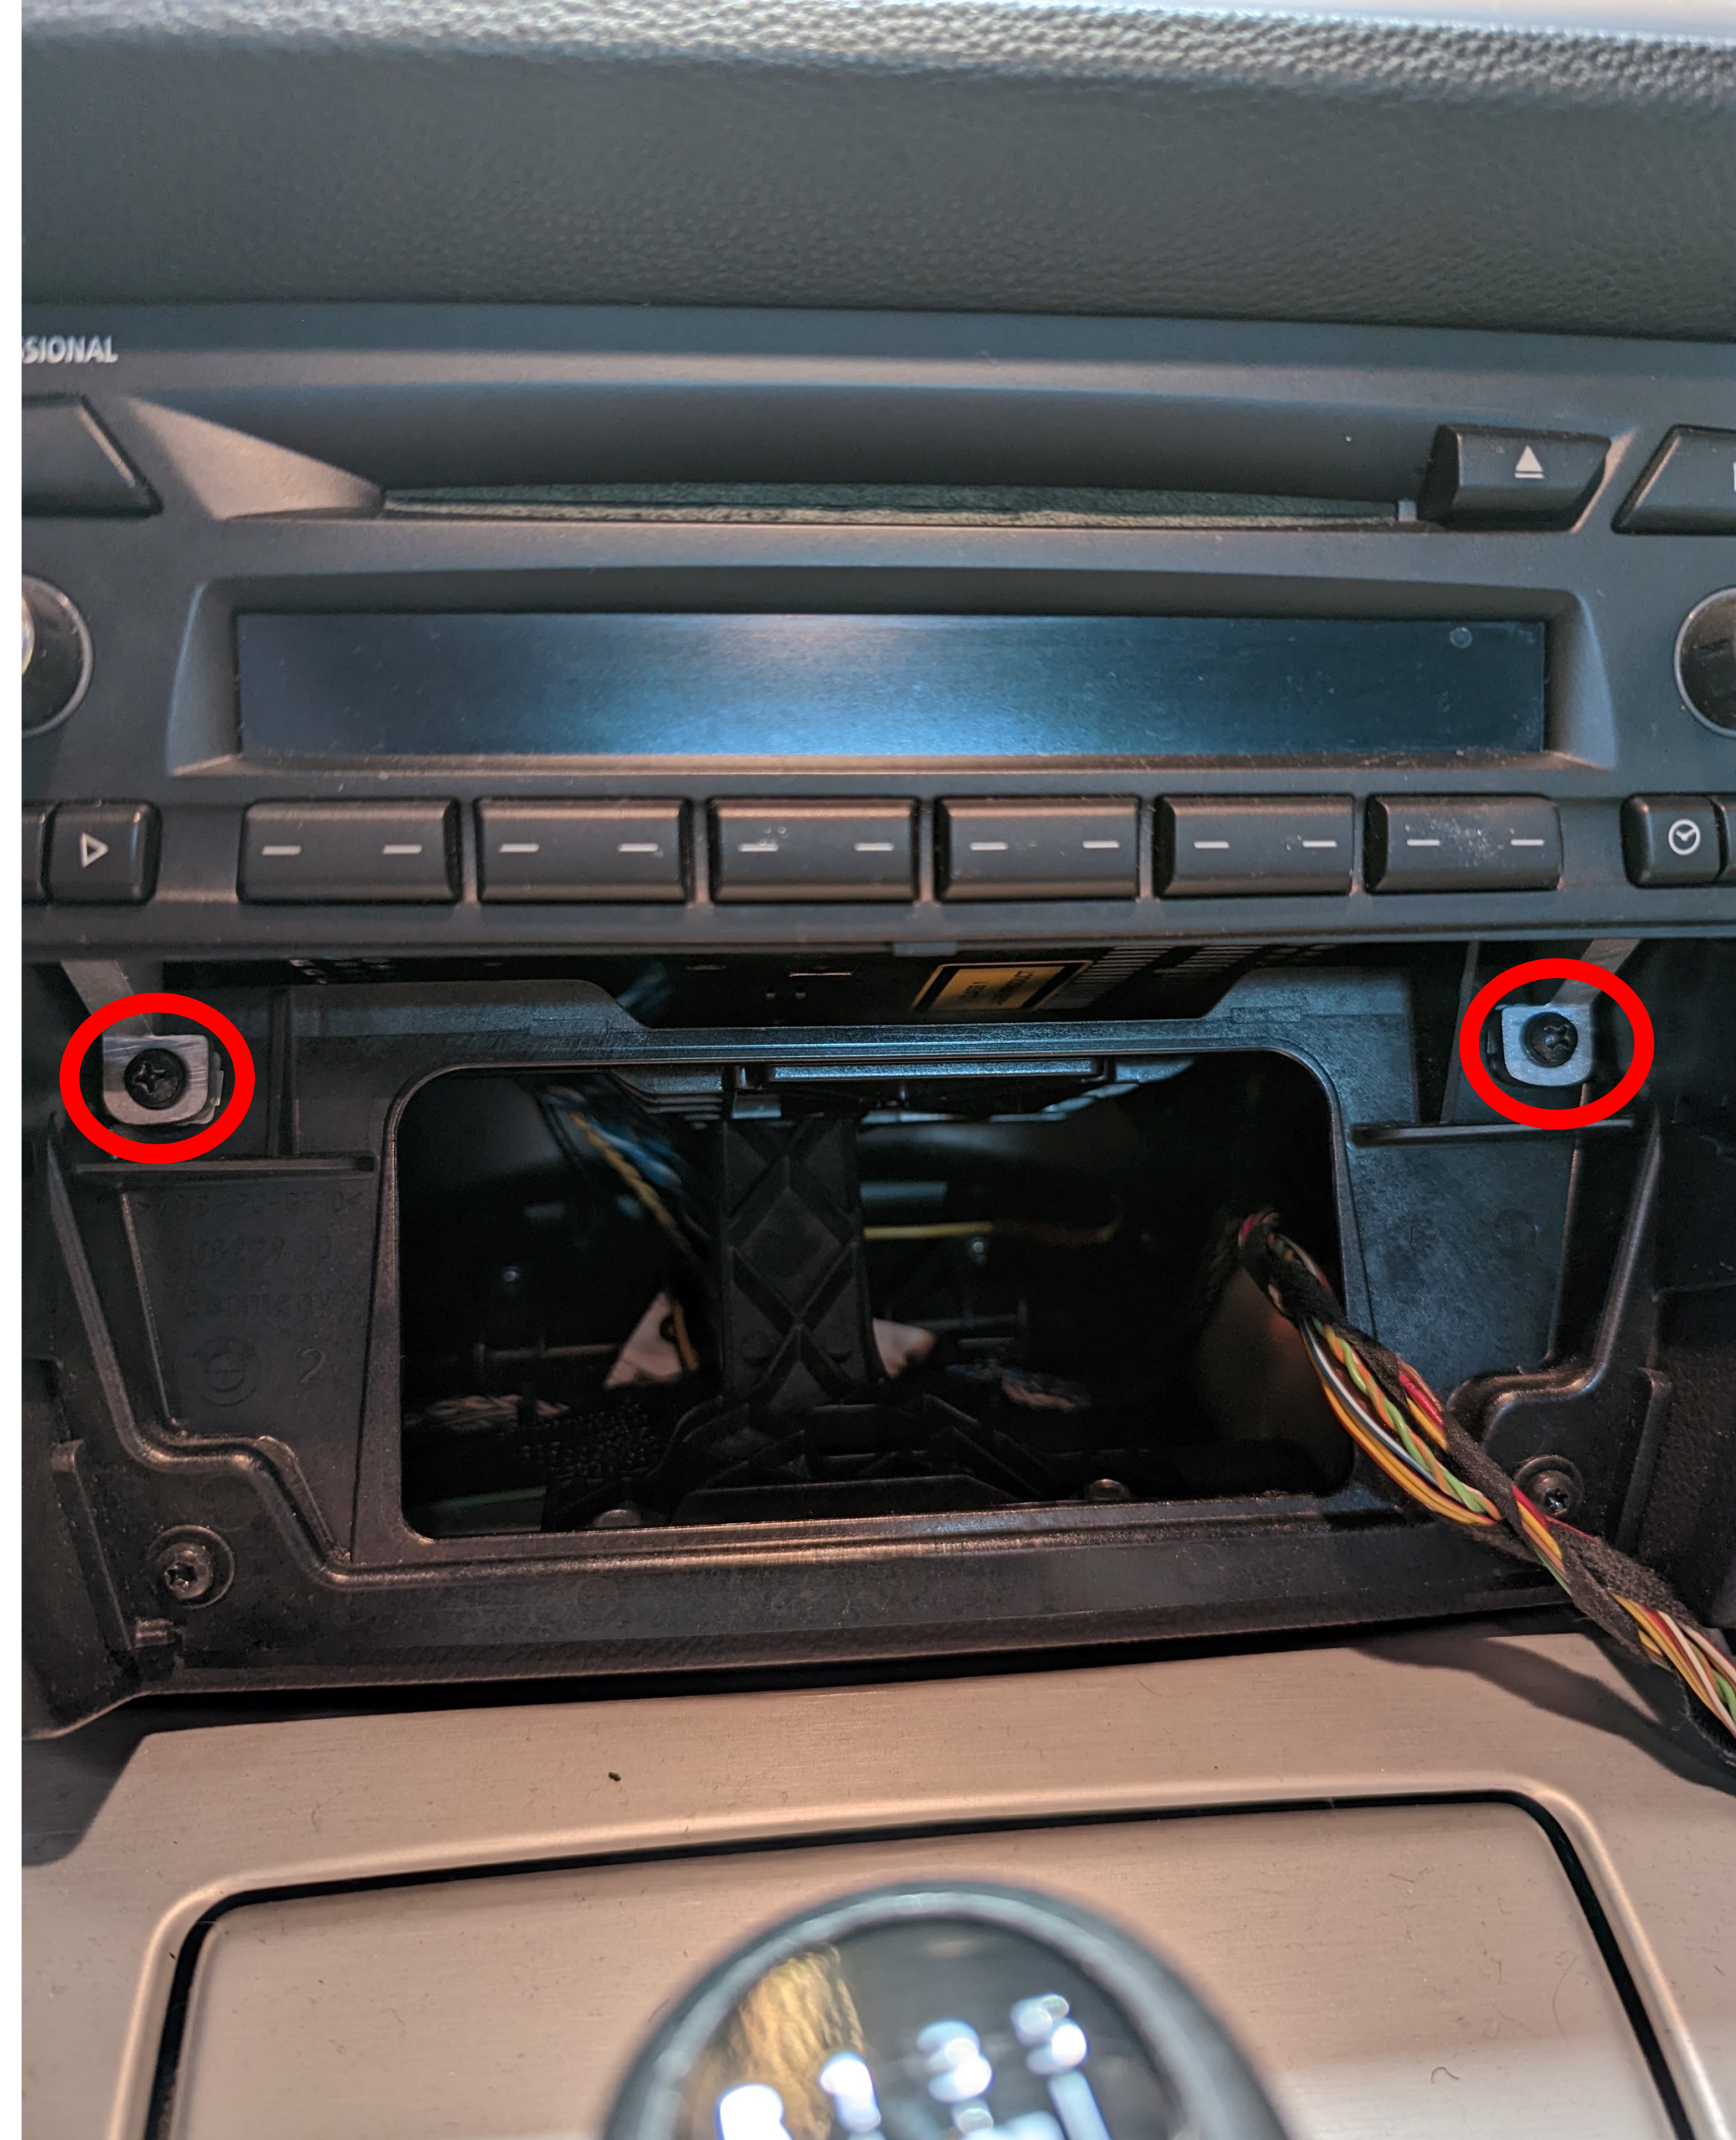


Stereo Removal 4

- Remove the quadlock connector and the fakra connector from the stereo.

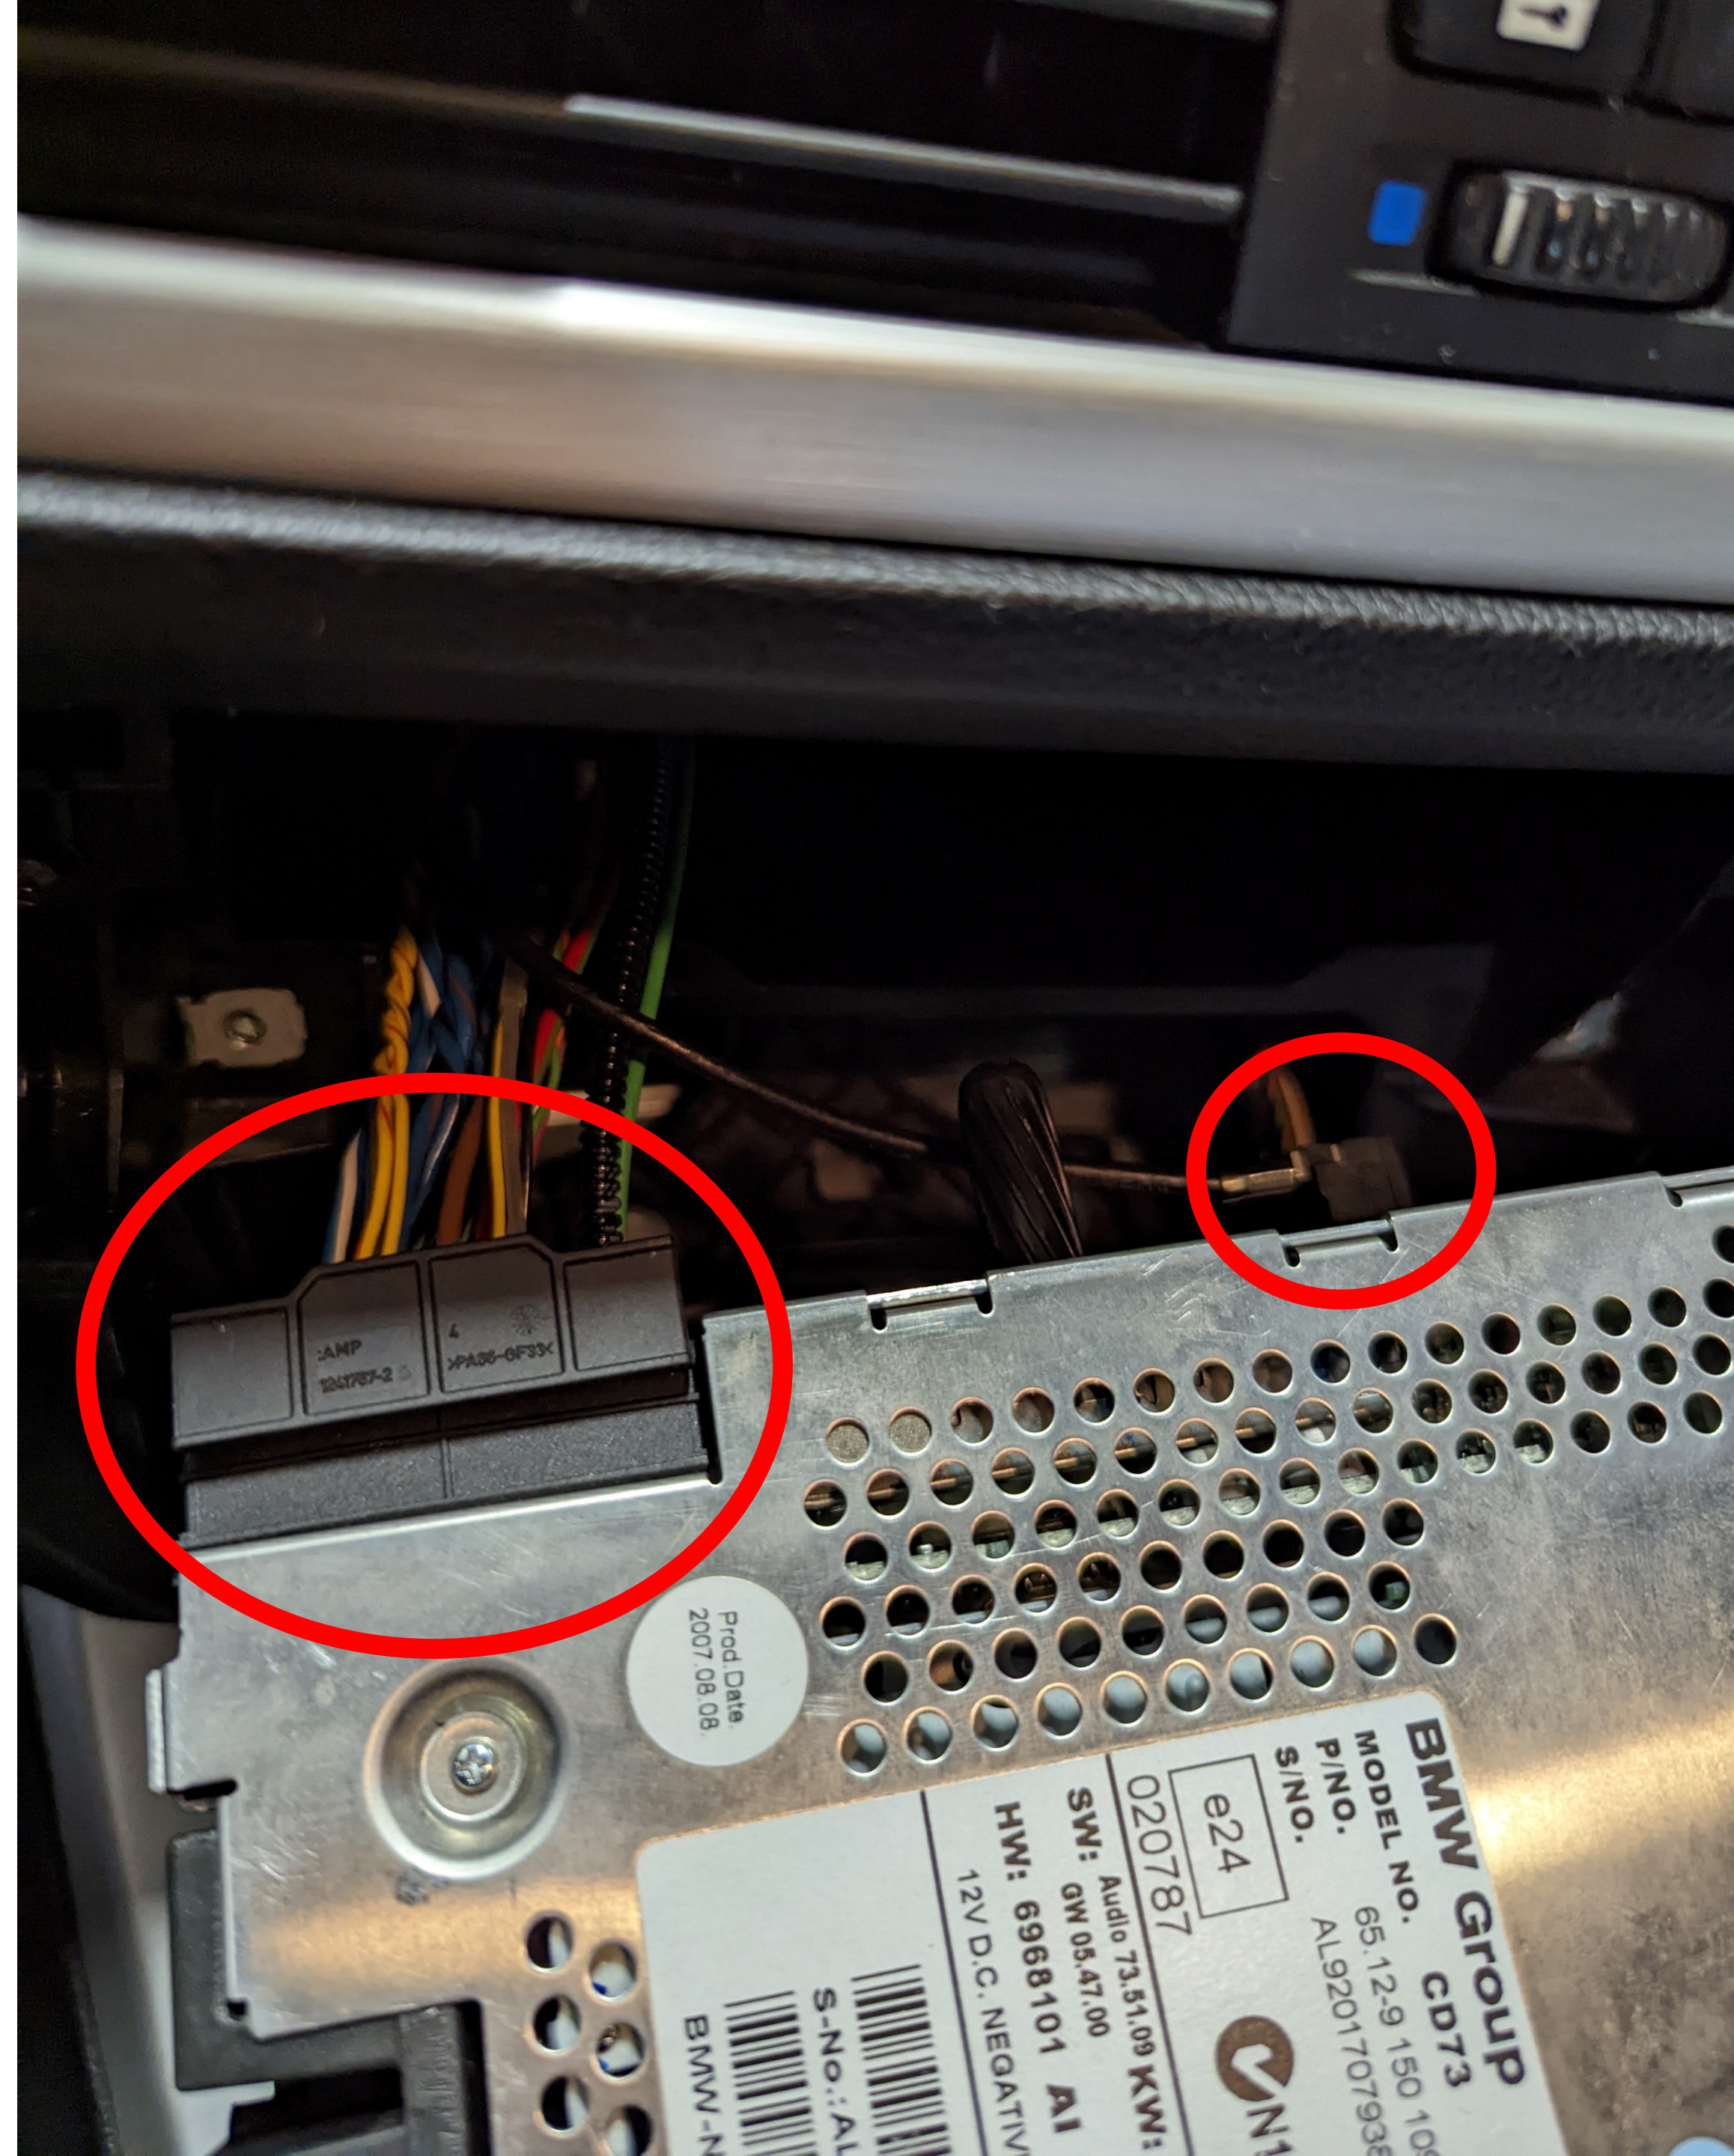


Cable Installation 1

- **OBS!** If there is a fiber optic cable in the original quadlock connector (the green wire and the green wire with black wire loom om) then that cable needs to be transferred to the new quadlock connector.
- If there is no such cable skip to Cable installation 3.

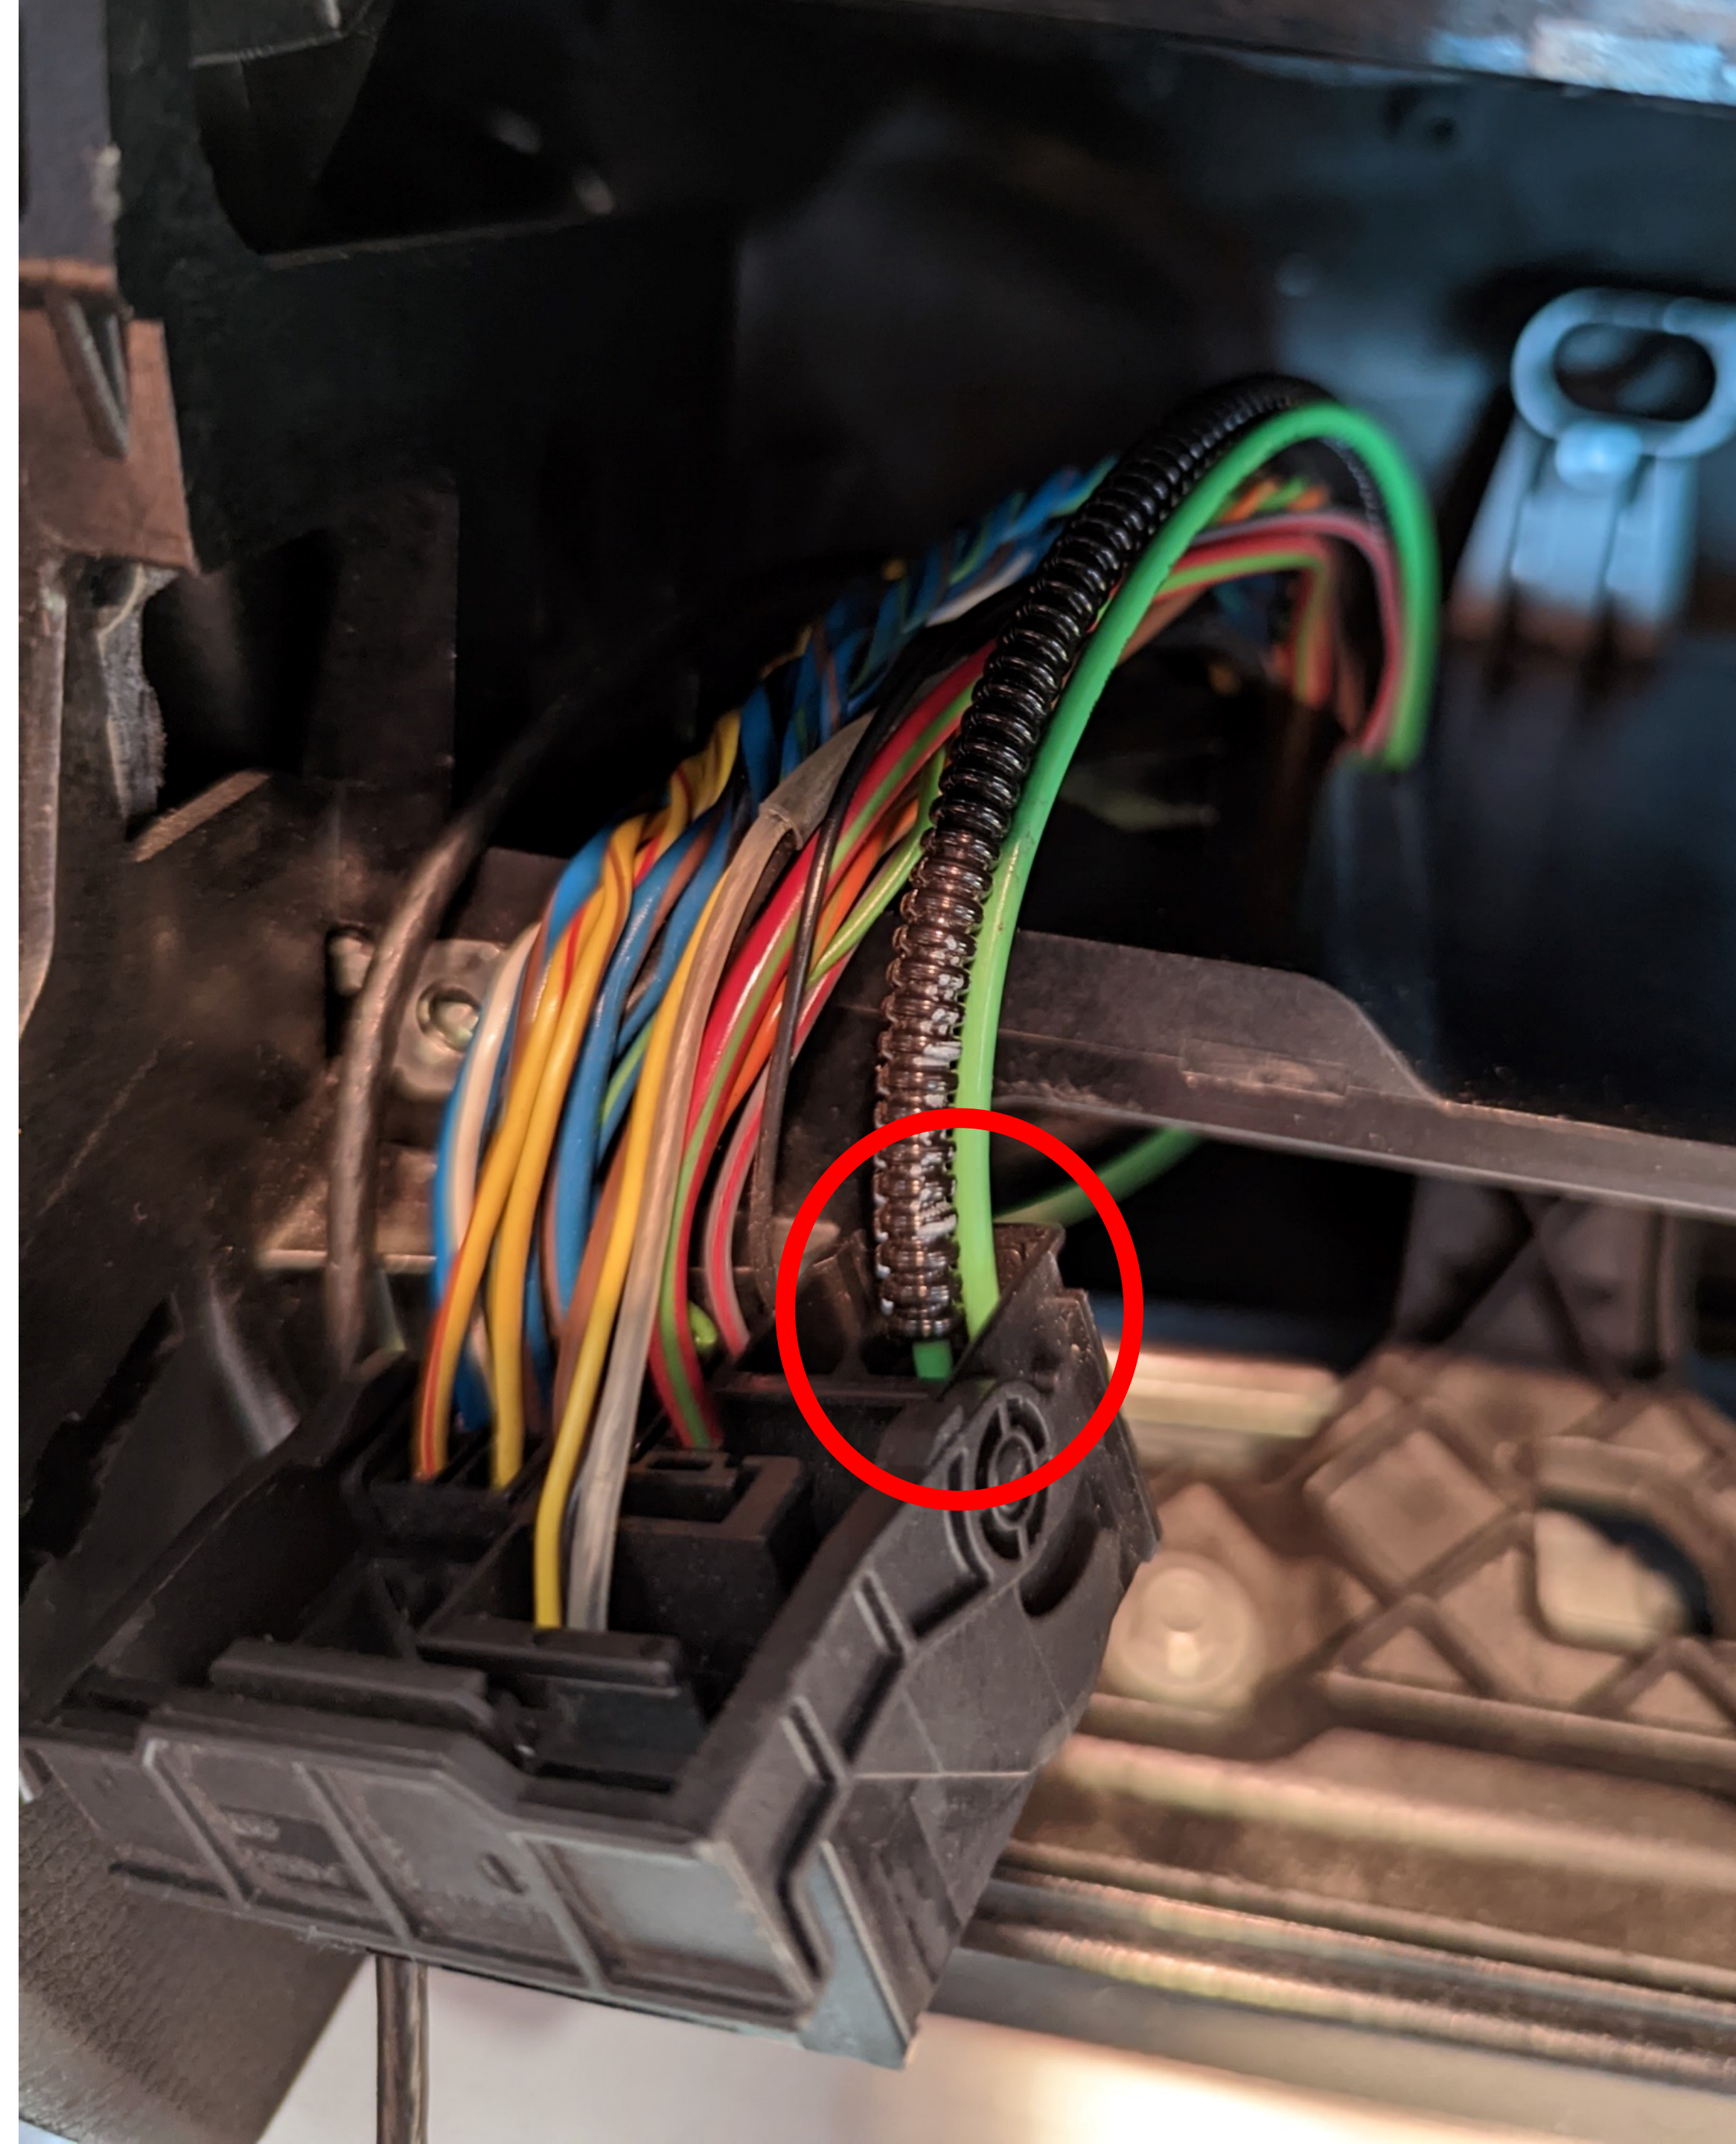


Cable Installation 2

- Under the fiber optical cable there is a little lock. Use a small flat screwdriver or something tiny to loosen the connector.

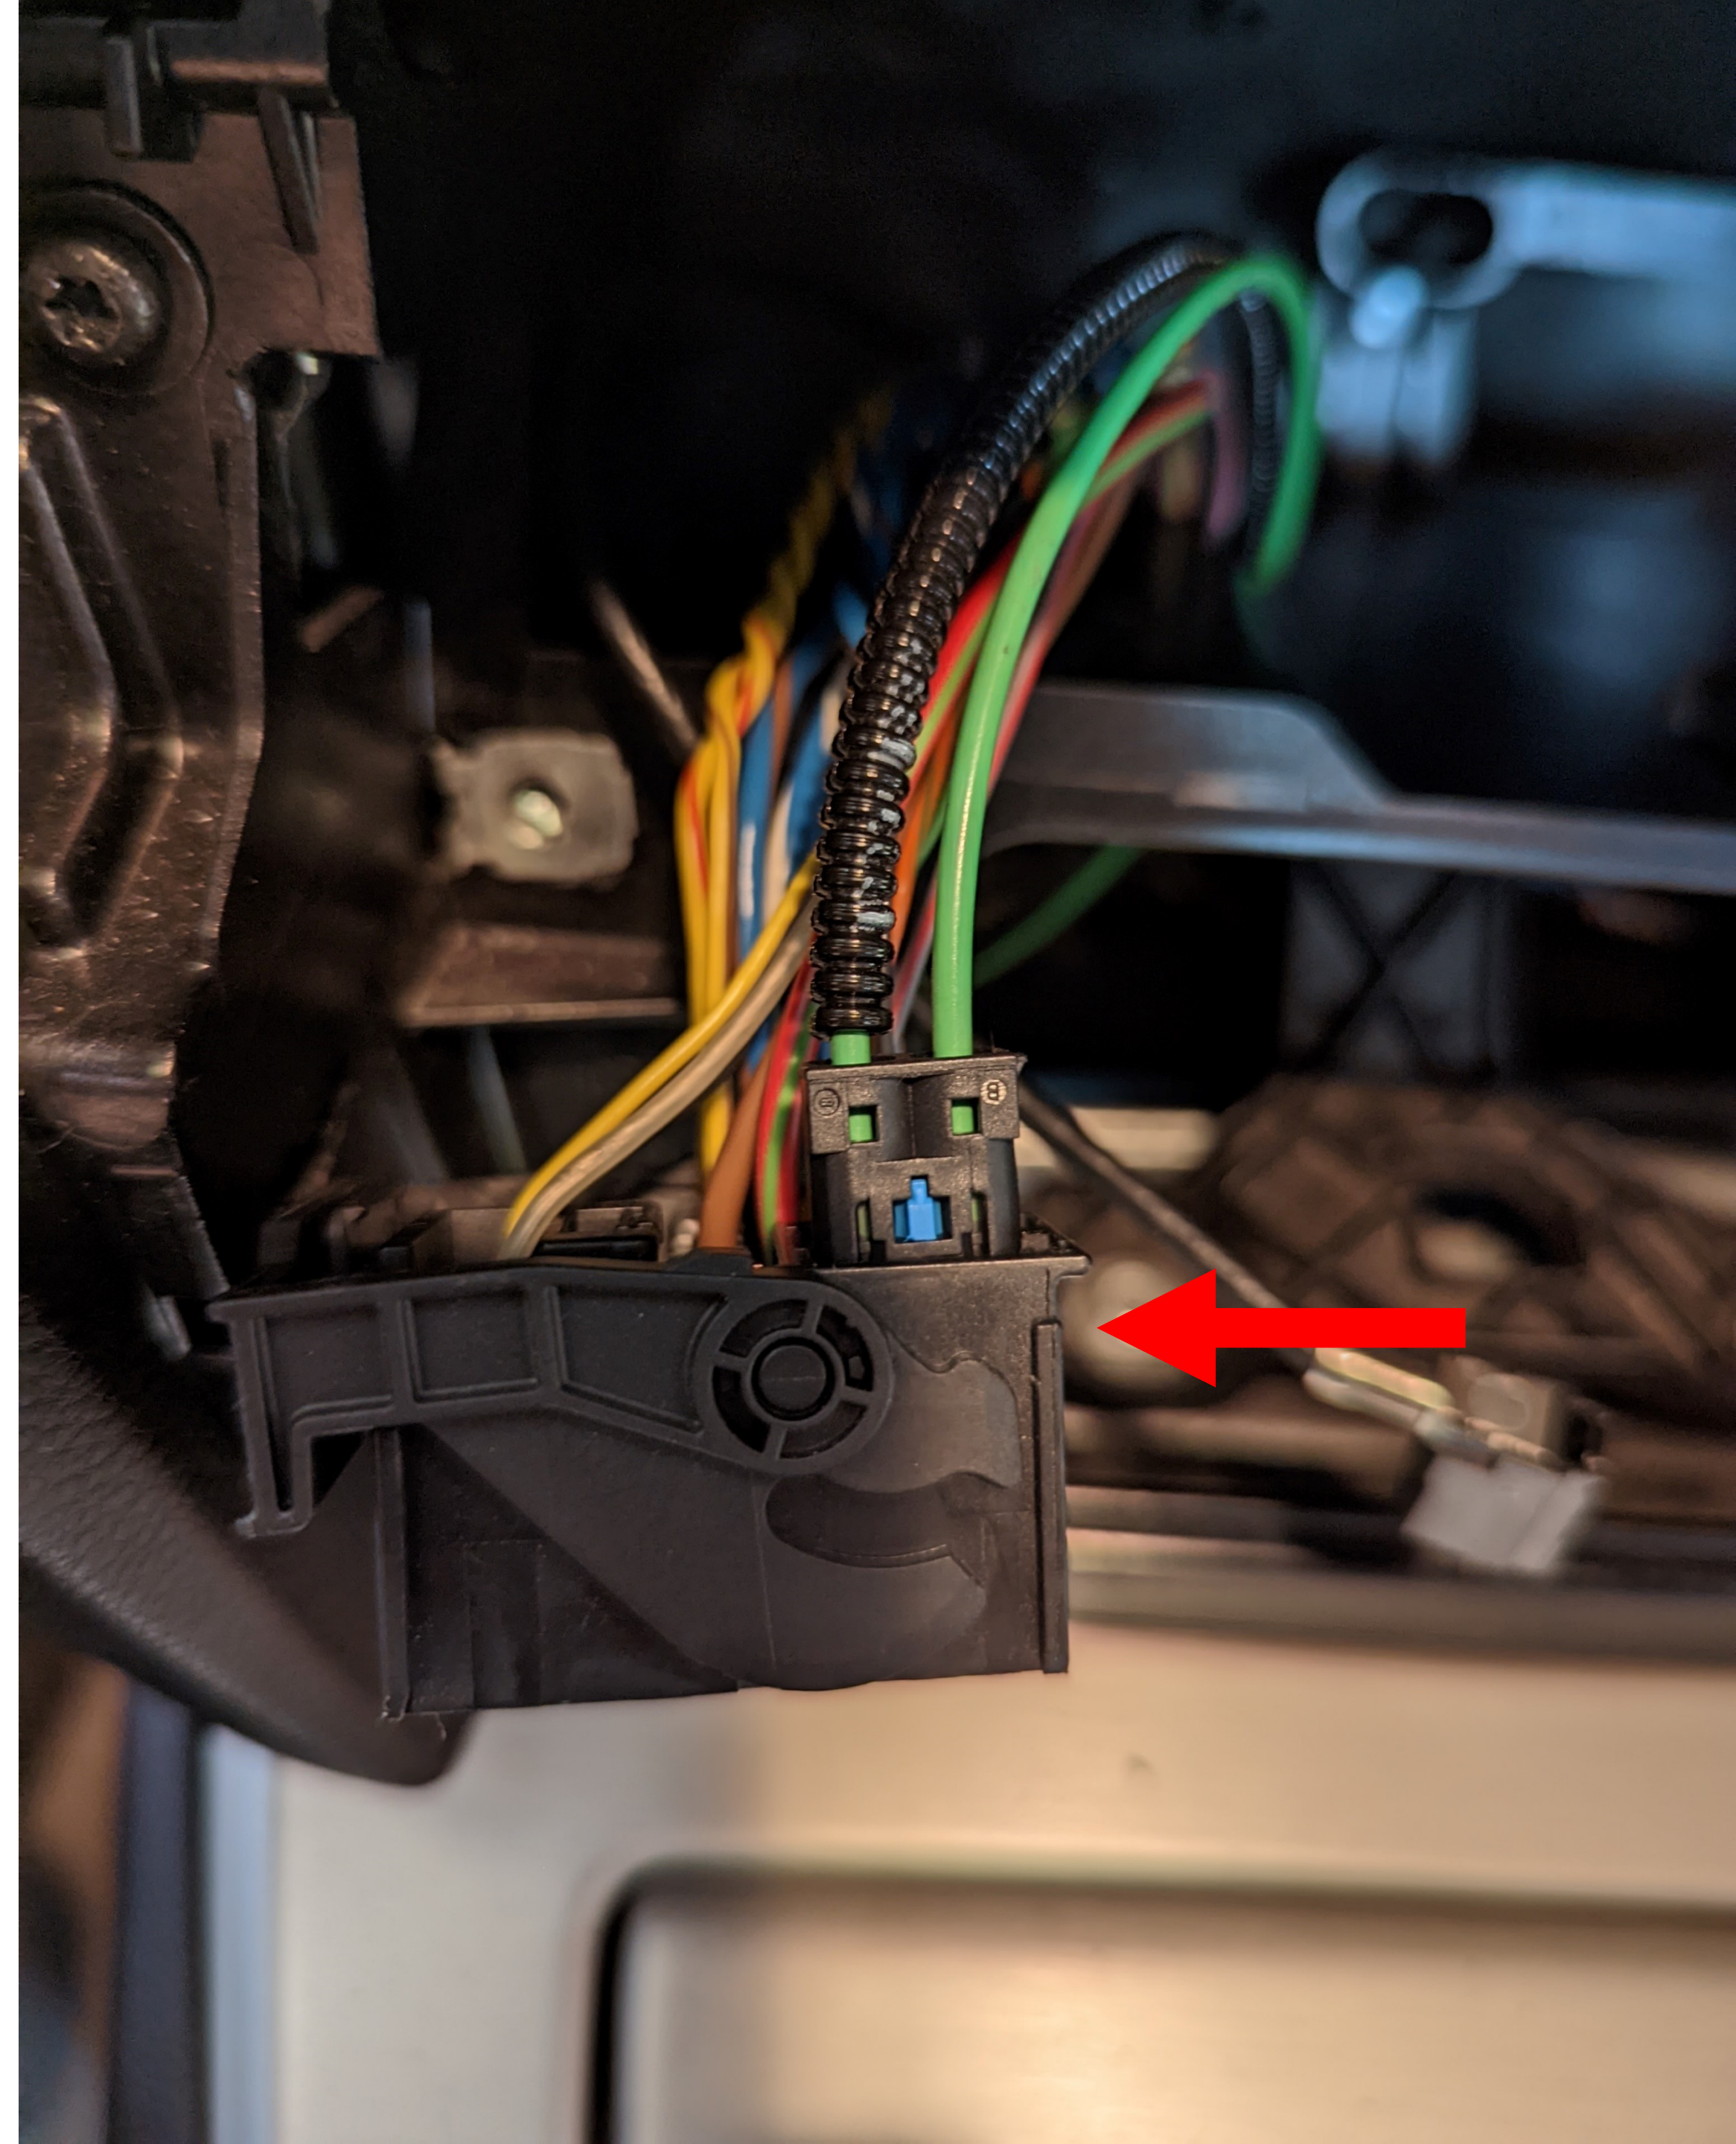


Cable Installation 3

- Connect the T-ISO harness.

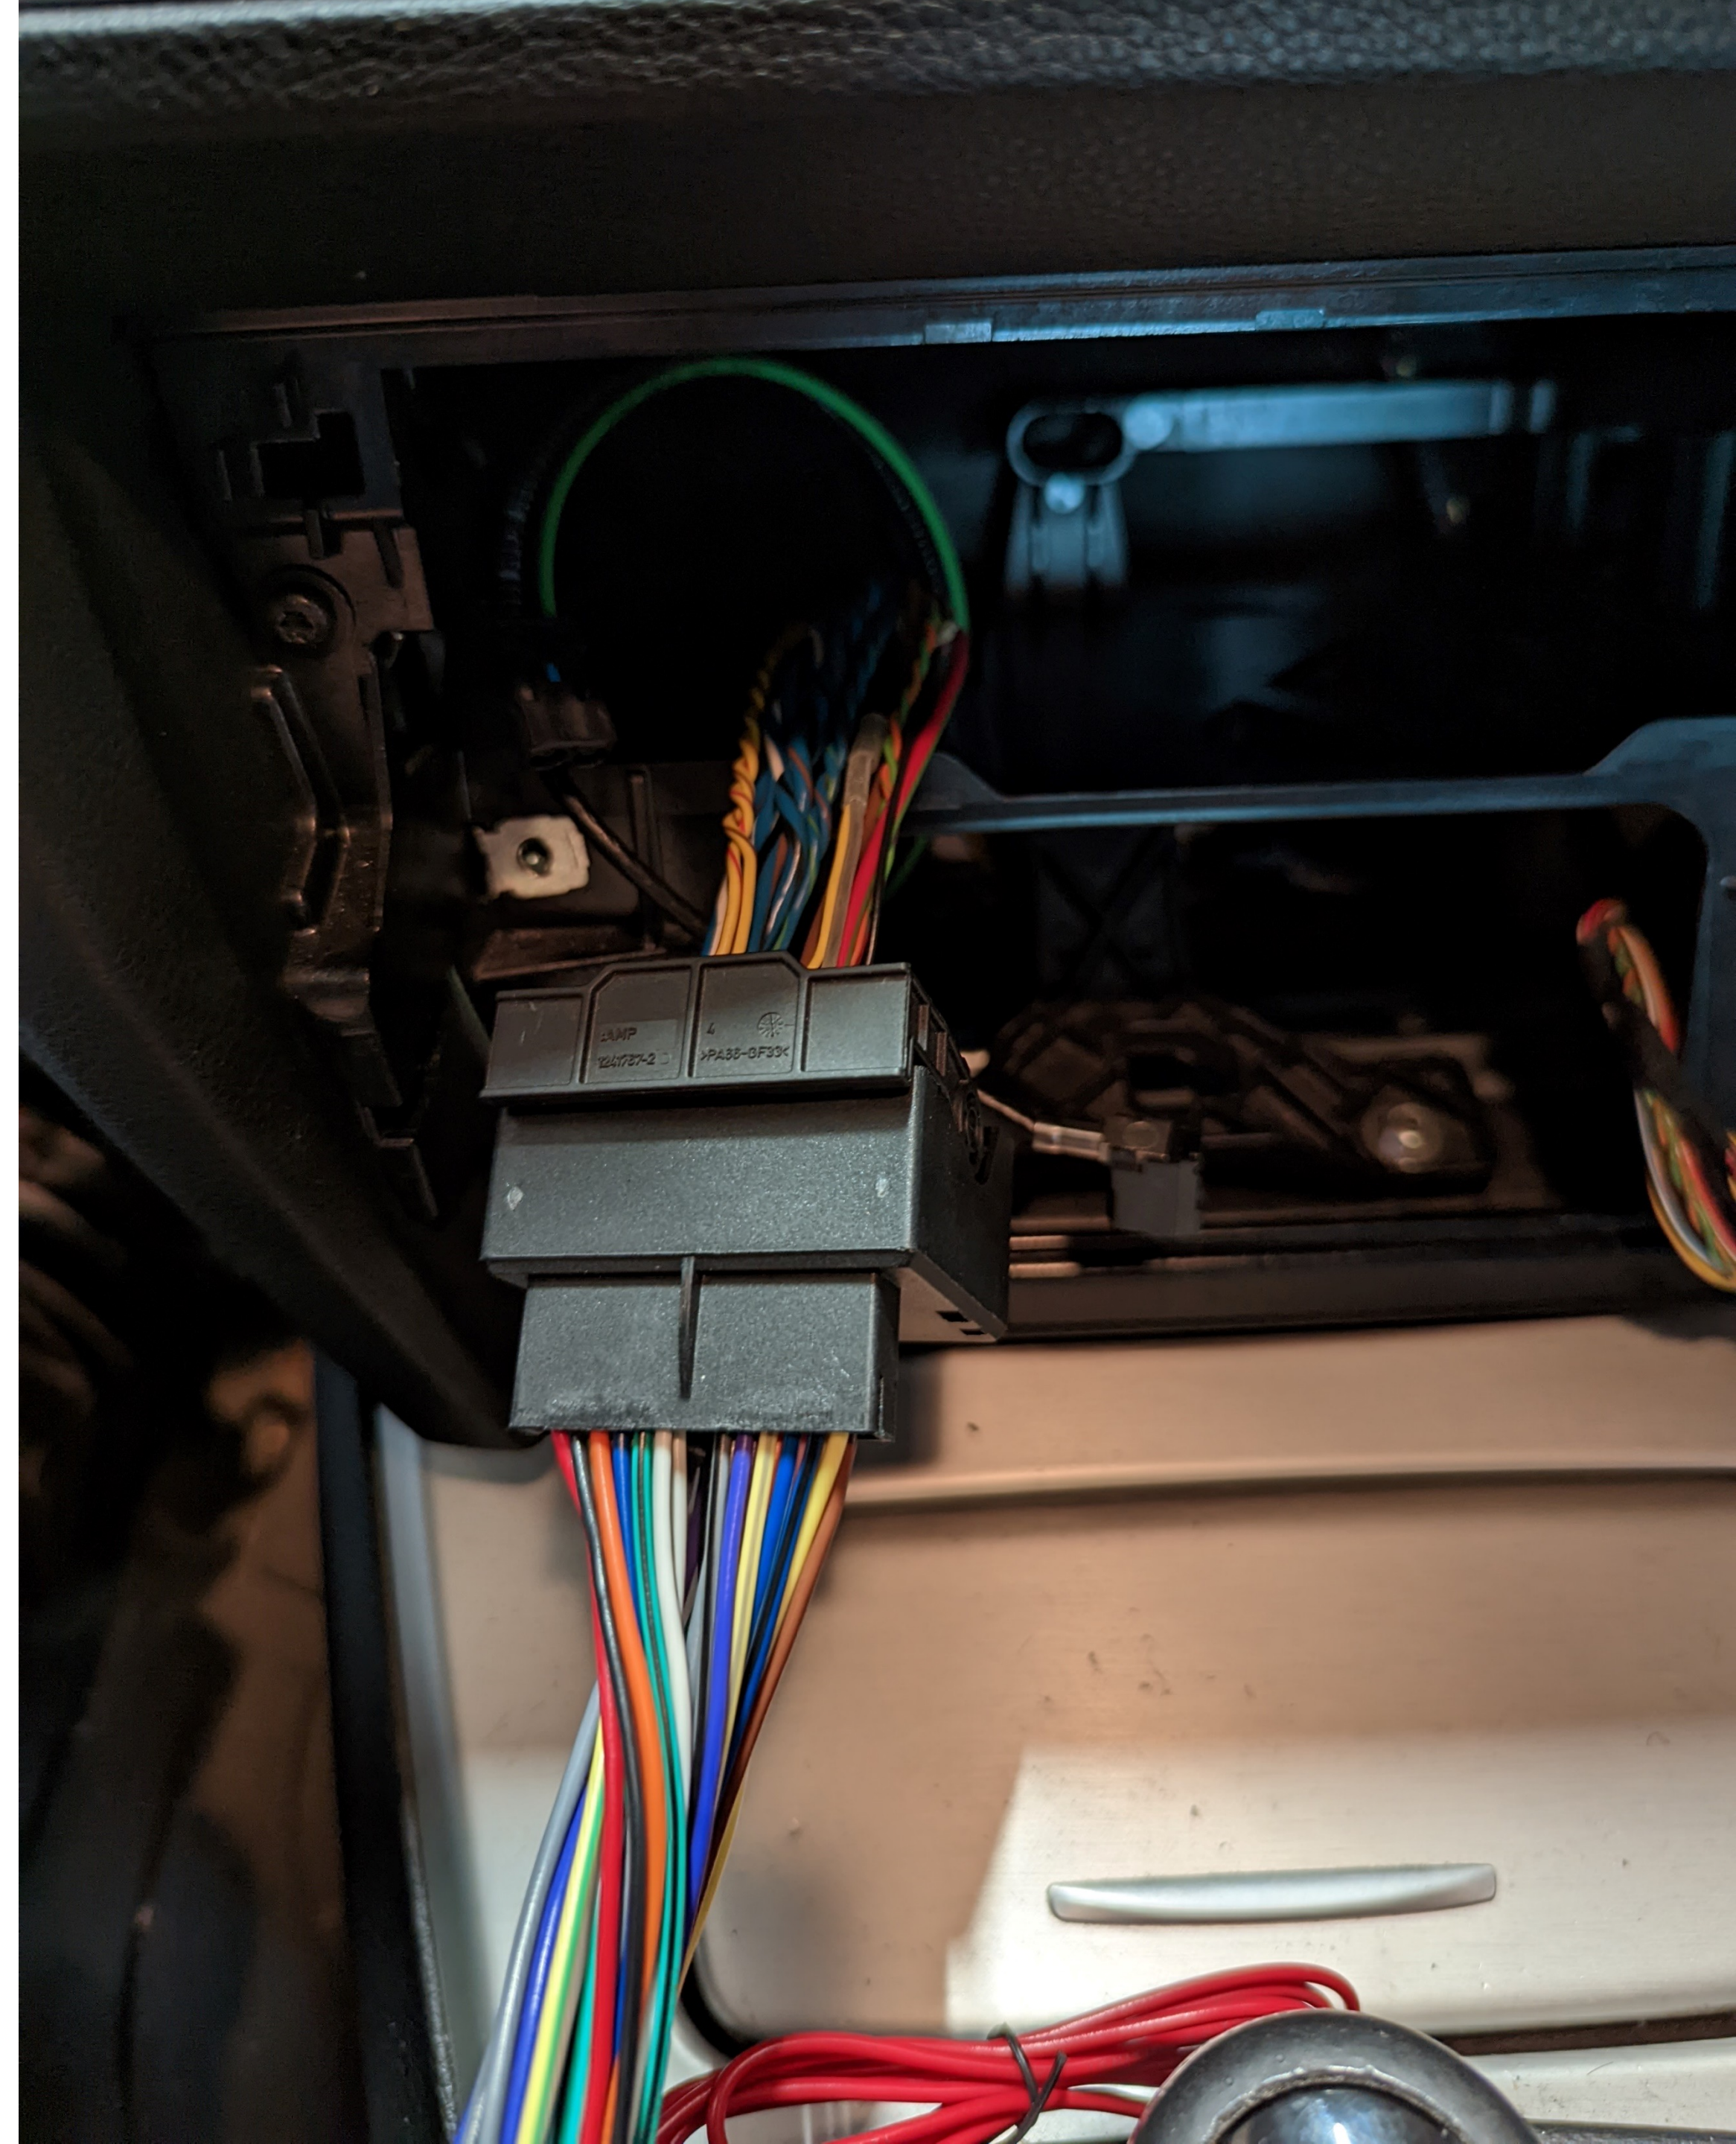


Cable Installation 4

- Connect the fiber optical cable to the new quadlock connector.
- If you do not have a fiber optical cable skip to the next step.

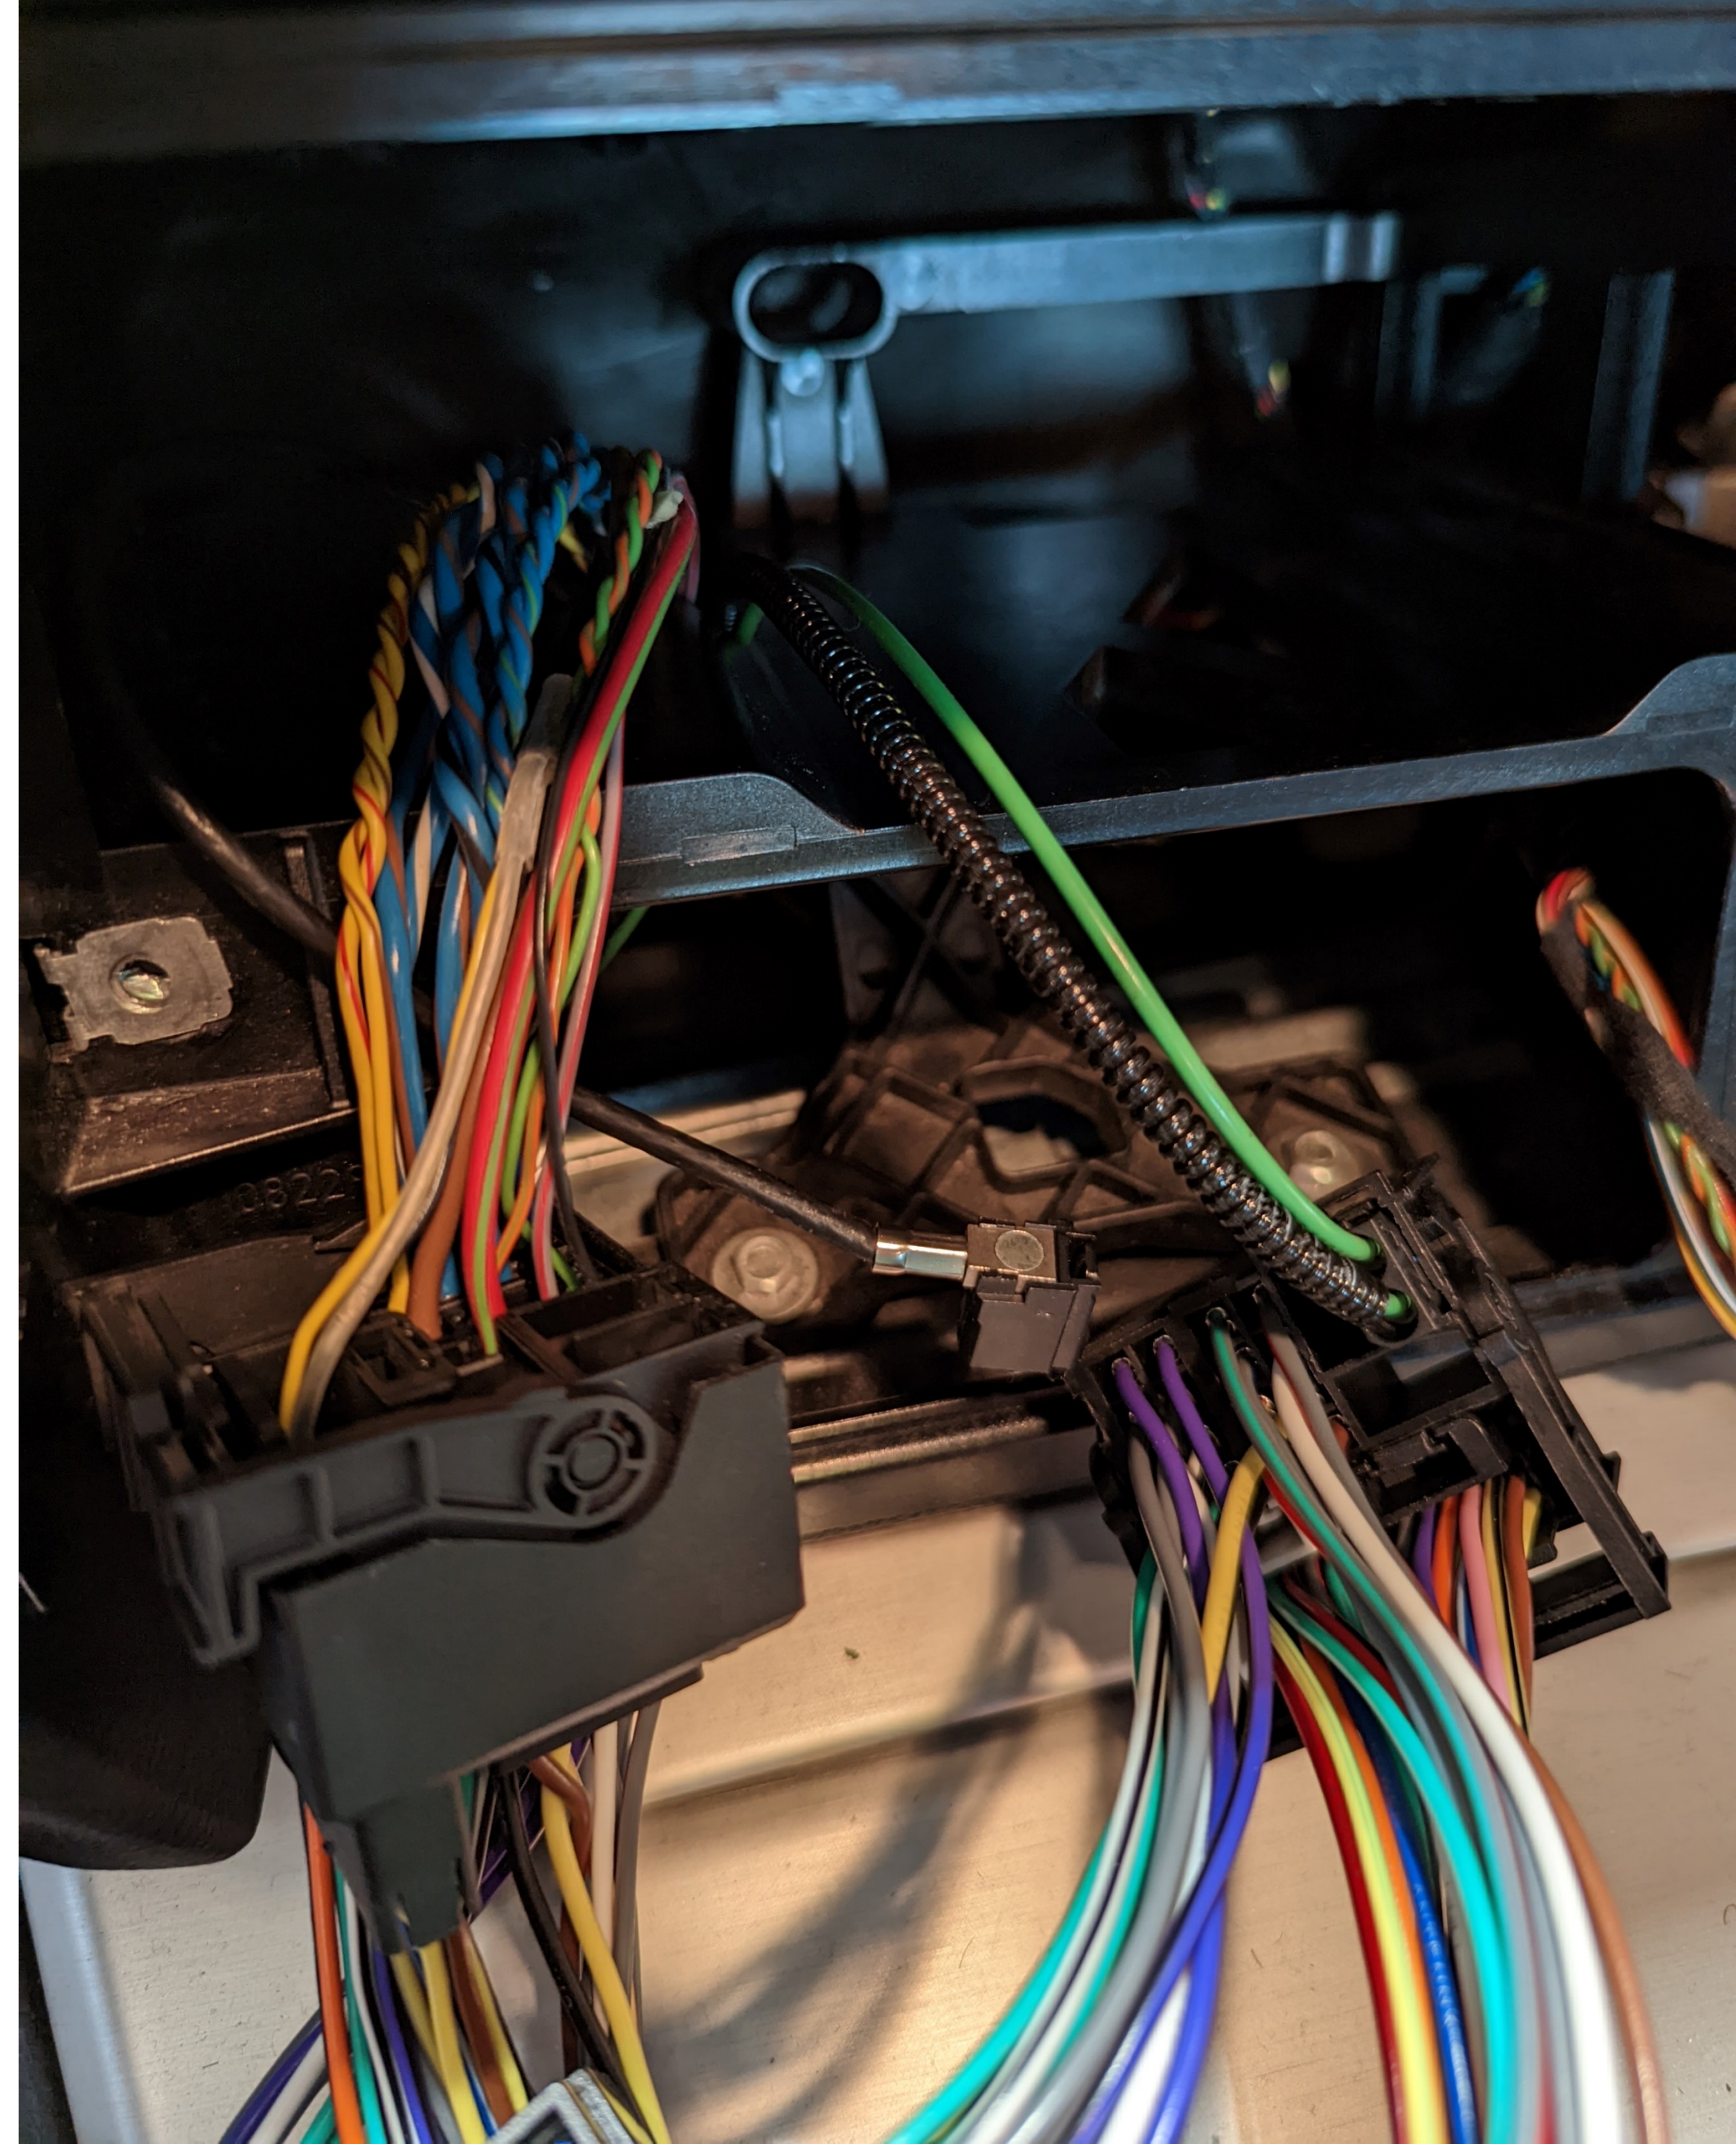

Cable Installation 5

- Connect the ISO connectors to the ZDAISOT cable harness.

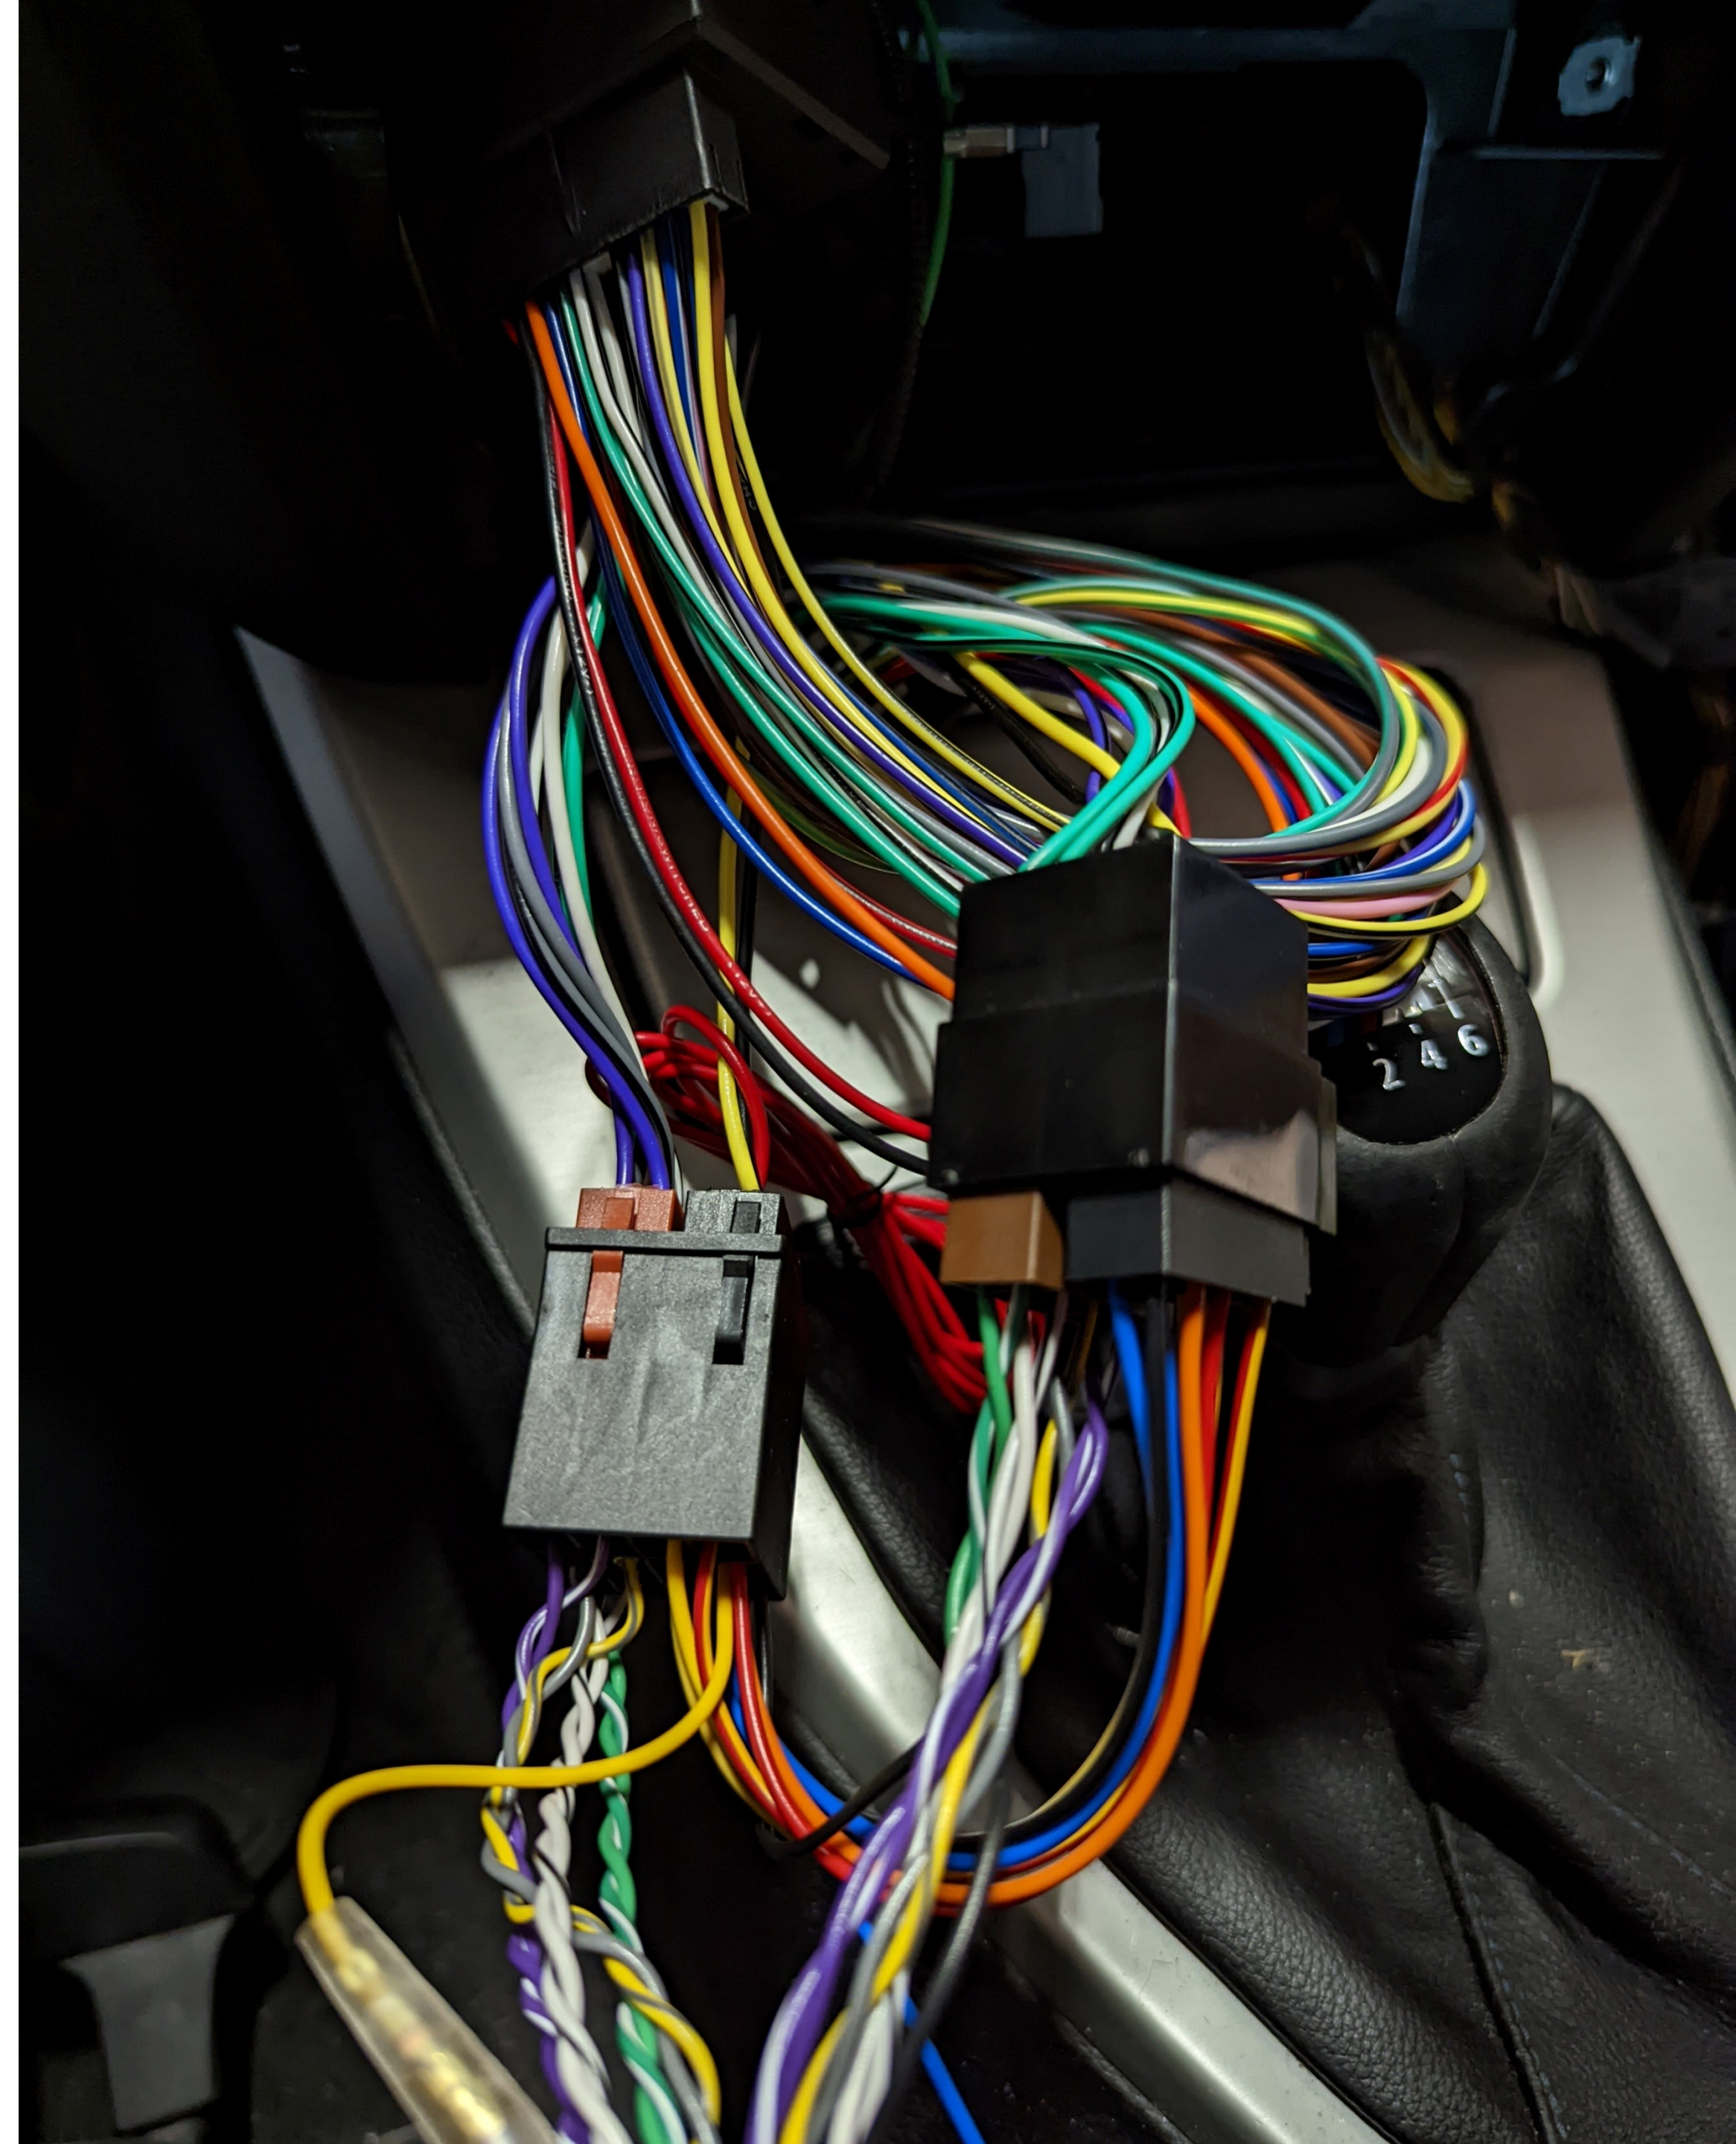

Cable Installation 6

- Take the ZDAISOT cable and run it behind the inner plastic panel behind the stereo.



Cable Installation 7

Tools required:

- T20 Torx Screwdriver
- Remove the panel under the glovebox by removing the two screws.
- Pull out the cable between the panels.
- Continue to pull the cable either to under the passenger seat or the the trunk.

