
MXN81C-TVI


AUTO HEATED, HD-TVI COLOR CAMERA





Contents




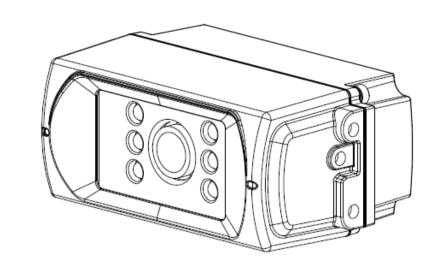


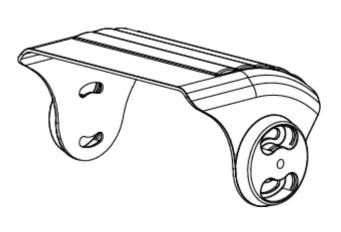

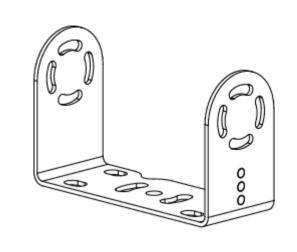

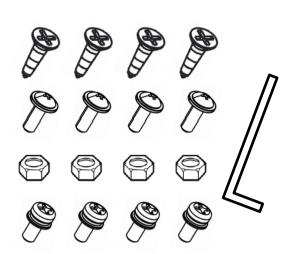

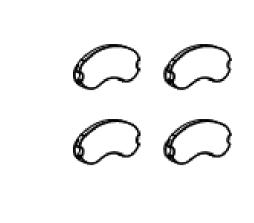

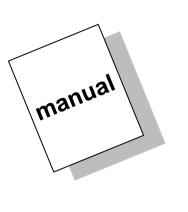

Camera x 1

Sunshield x 1

Bracket x 1

Camera Screw Kit x 1

Screw cap cover x 4 Instruction manual x 1

Features

- 2.07 Mega pixels Full HD SONY CMOS Color camera
- 1/2.8" Color CMOS high resolution image sensor (STARVIS)
- HD-TVI 4.0, 1080P/30fps
- IP69K Waterproof Rating
- Diagonal 136° Viewing
- Normal/Mirror Image switching
- Ultra low light performance ,Built in ICR filter block
- Automatic Electronic Iris ,WDR Function
- Built-in Microphone
- Built-in IR LED's
- Built-in Automatic Heater (below +10°C)
- Temp. -40° C $\sim 80^{\circ}$ C
- Vibration resistant (10G)
- Waterproof screw type connector (IP67), 4-pin mini-DIN
- ECE R10.05 approved (EMC)

Technical Specifications

Image Sensor: 1/2.8" SONY CMOS Sensor (STARVIS) Effective Pixels: 2.07 Mega pixels 1920(H) X 1080(V)

Resolution: 1080 TV lines Scanning System: Progressive

Video Output: HD-TVI 4.0, 1080P/30fps Audio Input: High Sensitive C-Microphone S/N ratio: Minimum 48dB (at AGC off) Minimum illumination: 0 Lux (IR LED's on)

DC 12V, 220mA (Heater on) Power consumption: DC 12V, 132mA (Heater off)


Power range: DC 9 ~ 48V Operating temperature: -40°C to +80°C

Viewing angle: 136°(Diagonal) x 120°(Horizontal) x 66°(Vertical)


95.9(W) x 43(H) x 62.8(D) mm

Dimensions: 109.2(W) x 85.5(H) x 80(D) mm (incl.bracket & sunvisor) Weight: 326g (total weight incl. bracket & sunvisor: 464g)

Front View

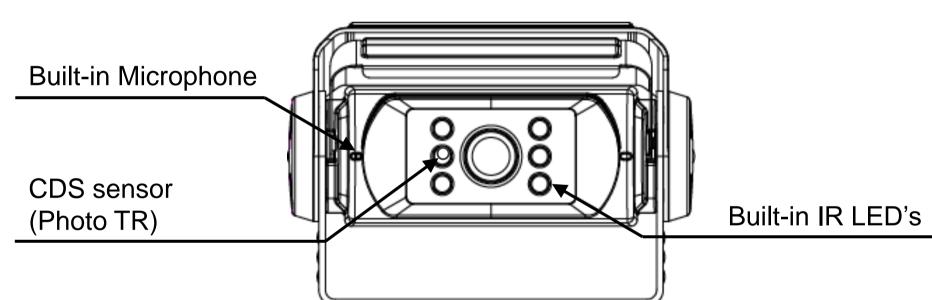

Rear View

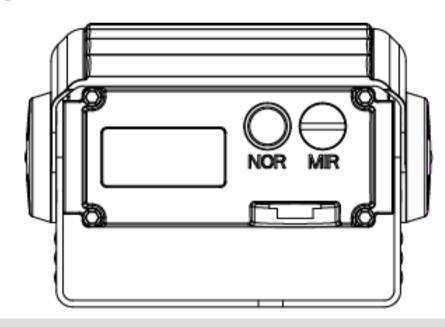


Installation

Camera Assembly

Cable grommet

Drill a suitable hole (approx. Ø 19mm) and insert the cable grommet.


Just before final fixation, please apply a proper sealant (for prevention) between the hole and the grommet and also between the cable and the grommet.

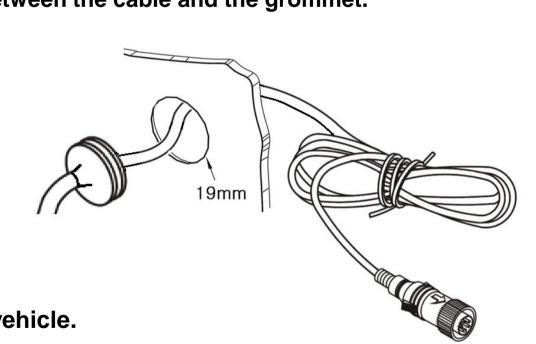


- 1. Fix the supplied mounting bracket to the vehicle.
- 2. Fix the bracket with camera and sun-shield according to drawing.
- 3. Adjust the viewing angle of the camera and fasten the screws firmly.

Securing cable connection

Match the arrow marks and press the connectors together. 2. Screw the camera connector up clockwise.

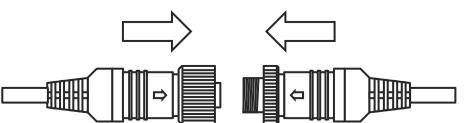

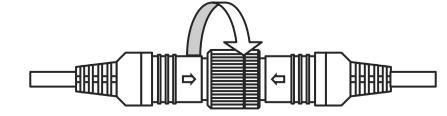


3. Tighten cable connection firmly in order to prevent water ingress.

Note!

The warranty will not be valid if the problem is related to moist / corrosion in the connector.

Wiring to Monitor

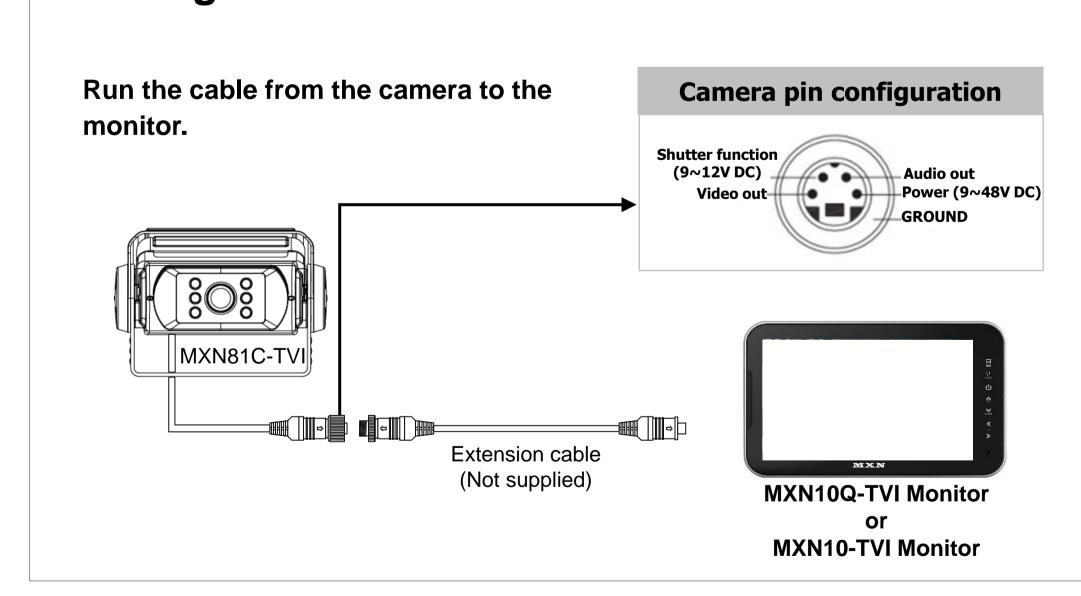

Caution !!

- 1. Before making the connection, disconnect the ground terminal from the battery to avoid short circuits.
- 2. The plugs should be fully inserted into the connectors or jacks. A loose connection may cause malfunctioning of the unit.
- 3. A damaged cable may affect the operation of the camera and may even cause a malfunction of the camera or monitor: Avoid a damaged cable!
- 4. Protect the cable by using a guide tube, pipe or run the cable inside the vehicle as much as possible. Caution! Run the cable in natural shapes in order to prevent cable breaks.
- 5. Preferably use an acid free grease in between the waterproof screw type connectors and tighten them firmly eachother.